

# Mission Specialist Portable Power Supply



DOCUMENT	REVISION	DATE	AUTHOR	CHECK	APPROVE
AN007	1.1.0	09/05/2025	SK	PEND	PEND

DOCUMENT NUMBER	REVISION NUMBER	DATE
AN007	1.1.0	09/05/2025

## TABLE OF CONTENTS

<b>1.0</b>	<b>INTRODUCTION.....</b>	<b>3</b>
1.1	Safety Requirements.....	3
1.2	Tools Needed.....	3
1.3	Accessories and Hardware.....	3
1.4	VideoRay recommended battery packs.....	7
<b>2.0</b>	<b>BATTERY PACKS - INSTALLATION AND REMOVAL.....</b>	<b>10</b>
2.1	M24 Batteries .....	10
2.2	2590 Batteries .....	24
2.3	6T Battery.....	35
<b>3.0</b>	<b>CHARGING.....</b>	<b>46</b>
<b>4.0</b>	<b>SETTINGS CONFIGURATION.....</b>	<b>56</b>
4.1	Battery Monitor Configuration by Bluetooth connectivity (quick method) .....	56
4.2	Battery Monitor Manual Configuration (long method) .....	64
4.3	PPS2412 Charger Configuration (Bluetooth Only).....	67
<b>5.0</b>	<b>HOW TO OPERATE PPS.....</b>	<b>72</b>
5.1	Start up procedure.....	72
5.2	Using the PPS with Mission Specialist Systems.....	77
<b>6.0</b>	<b>DISCHARGING.....</b>	<b>81</b>
<b>7.0</b>	<b>BASIC TROUBLESHOOTING.....</b>	<b>87</b>
7.1	FAQ.....	87
7.2	No Power output from PPS .....	89

**CAUTION: DO NOT USE THE CYCLLE SATIATOR  
CHARGER TO CHARGE 2590 LI-ION BATTERIES  
FOR USE WITH M24 OR 6T BATTERY PACKS ONLY**

DOCUMENT NUMBER	REVISION NUMBER	DATE
AN007	1.1.0	09/05/2025

## 1.0 INTRODUCTION

The purpose of this procedure is to outline the use of a VideoRay PPS system.

### 1.1 Safety Requirements

High shock hazard; do not open the battery panel unless you have read and understood these instructions in their entirety.

Charging should never take place without removing the battery storage panel prior. Only charge in a well-ventilated area.

Never use a Cycle Satiator charger for charging 2590 Li-Ion batteries. Use

### 1.2 Tools Needed

1/2" wrench

9/16" wrench

T20 Torque driver

### 1.3 Accessories and Hardware

#### 1.3.1 Standard Accessories

- Inverter manual
- Battery Monitor Manual
- [72914] Std power cord (for OCC)



- [72892] 3 outlet U.S. Extension cord

DOCUMENT NUMBER	REVISION NUMBER	DATE
AN007	1.1.0	09/05/2025

- [72915] Battery Power Main leads (2 Gauge)



- [72785] Black 30" positive cable

- [72786] Red 30" negative cable

- [72783] Red and Black 14" series cable

### 1.3.2 Hardware

- [70256] M6 male thumb screw



- [71838] M6 female thumb screw



### 1.3.3 Additional Accessories

#### 1.3.3.1 [72797] M24 battery integration kit

- [72917] M24 hold down plate



- [71765] Battery Support Foam; M24



DOCUMENT NUMBER	REVISION NUMBER	DATE
AN007	1.1.0	09/05/2025

[72798] 2590 battery integration kit

- [72881] 2590 base tray



- [72882] 2590 top plate



- [72916] 2590 battery harness






DOCUMENT NUMBER	REVISION NUMBER	DATE
AN007	1.1.0	09/05/2025

### 1.3.3.2 [72796] 6T battery integration kit

- [71605] 6T battery hold down plate



- [71767] battery support foam; 6T

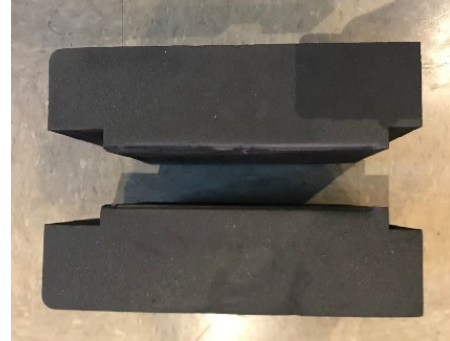

### 1.3.3.3 PPS [73507] 12-63V 8A battery charger



**CAUTION: FOR USE WITH M24 OR 6T BATTERY PACKS ONLY  
DO NOT USE TO CHARGE 2590 LI-ION BATTERIES**

DOCUMENT NUMBER	REVISION NUMBER	DATE
AN007	1.1.0	09/05/2025

## 1.4 VideoRay recommended battery packs

### 1.4.1 "M24"

Two (2) "group 24 type M" batteries may be purchased at local auto parts store. The physical constraint of each battery is roughly 10.25" x 6.65" x 8.35" or 260mm x 169mm x 211mm. Terminal type M is preferred. **\*\*The PPS system has a maximum length of 10.5"**

Caution: Always replace both batteries at once. Do not mix used and new batteries.

**Recommended battery:** AC Delco M24AGM



### 1.4.2 "2590's"

Twelve (12) batteries are needed. The physical constraint of each battery is roughly 4.4" x 2.4" x 5.0" or 112mm x 61mm x 127mm.

It is not necessary to replace all batteries at once. Mixing used and new batteries is ok.

**Recommended battery:** BT-70791CG, BT-70791CK, BT-70791CE, BT-70790B, BT-70791JV, BT-70791A, BT-70791BK **\*\*ALL 12 batteries being used MUST be of the same chemistry\*\***



**CAUTION: DO NOT USE THE  
CYCLE SATIATOR TO CHARGE  
2590 LI-ION BATTERIES**

DOCUMENT NUMBER	REVISION NUMBER	DATE
AN007	1.1.0	09/05/2025

#### 1.4.4 "6T"

One (1) battery is needed. The physical constraint of each battery is roughly 9.85" x 10.5" x 9.05" or 250mm x 267mm x 230mm. **\*\*The PPS system has a maximum length of 10.5"**

**Recommended battery:** BT-70939






DOCUMENT NUMBER	REVISION NUMBER	DATE
AN007	1.1.0	09/05/2025

### 1.4.5 Performance Comparison

Useable capacity mainly depends on battery chemistry and rate of use. For these calculations 24V and average load of 1Kw are used. Discharge potential: lithium – 95%, Lead acid – 50%, NiMh – 72%

Battery Pack	Total Capacity	Approximate run time *dependent on usage
(2) M24 AGM batteries in series AC Delco M24AGM	116 Ah – 58Ah useable	1.0 – 1.73 hours
(1) 6T lithium battery BT-70939AP	103 Ah – 98Ah useable	3.6 – 6.2 hours
(12) 2590 batteries in parallel BT-70791CG	118 Ah – 110Ah useable	4.9 – 8.5 hours
(12) 2590 batteries in parallel BT-70791CK	90 Ah – 84Ah useable	3.8 – 6.5 hours
(12) 2590 batteries in parallel BT-70790B	58.8 Ah – 43Ah useable	1.5 – 3.0 hours

Various battery chemistries have different voltage curves during discharge. Lithium batteries will have more useable AH than lead acid, AGM, and NiMh.

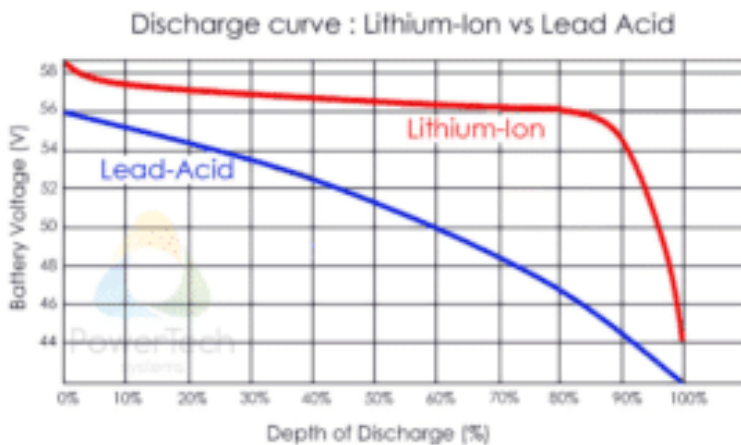

DOCUMENT NUMBER	REVISION NUMBER	DATE
AN007	1.1.0	09/05/2025

## 2.0 BATTERY PACKS - INSTALLATION AND REMOVAL

### 2.1 M24 Batteries

Required parts:

- Two (2) M24 batteries
- [72915] Battery main leads (2 Gauge)
- [72797] M24 battery integration kit
  - [72917] M24 hold down plate
  - [71765] Battery Support Foam; M24

Step	Description	Notes
1.	Refer to section 2.2 & 2.3 for the removal process of 2590 battery packs or 6T battery packs.	
2.	Open the pelican case lid to access the battery storage panel.	



DOCUMENT NUMBER	REVISION NUMBER	DATE
AN007	1.1.0	09/05/2025

Step	Description	Notes
------	-------------	-------

- Assure that the power main switch is set to the "OFF" position, and that nothing is plugged into the PPS power outlet. The inverter switch should also be set to "OFF"




- \*\*\*Read through all of these steps prior to starting. **Caution** high risk of electric shock. Be very cautious of your tools, touching multiple terminals with your tool could result in a DC short. \*\*\*




DOCUMENT NUMBER	REVISION NUMBER	DATE
AN007	1.1.0	09/05/2025

Step	Description	Notes
------	-------------	-------

- Remove the six (6) M6 male thumb screws[70256] securing the battery storage panel in place. Store these thumb screws safely to the side.

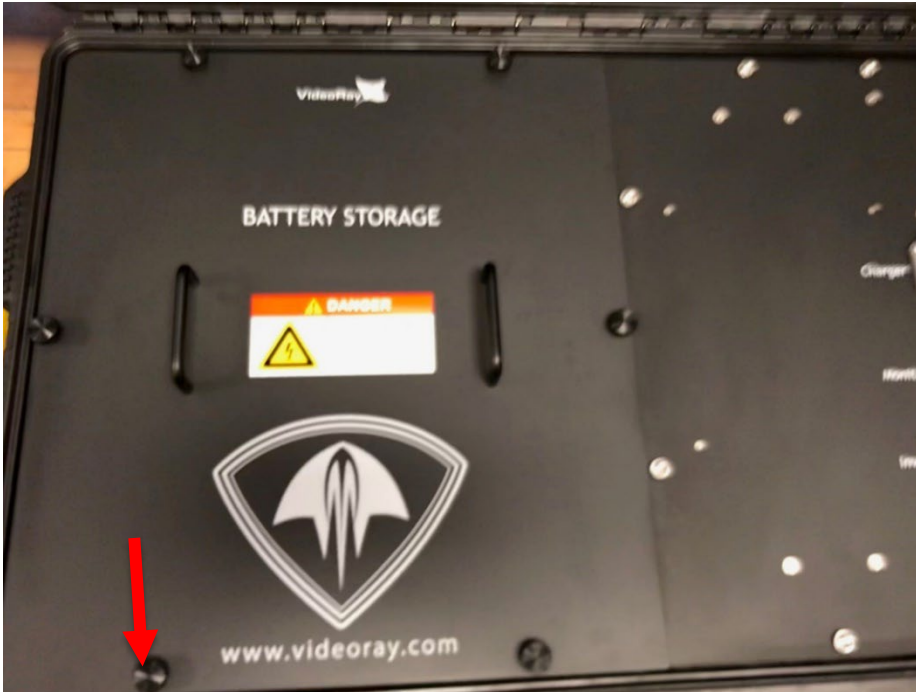


- Remove the battery storage panel and store it safely to the side.

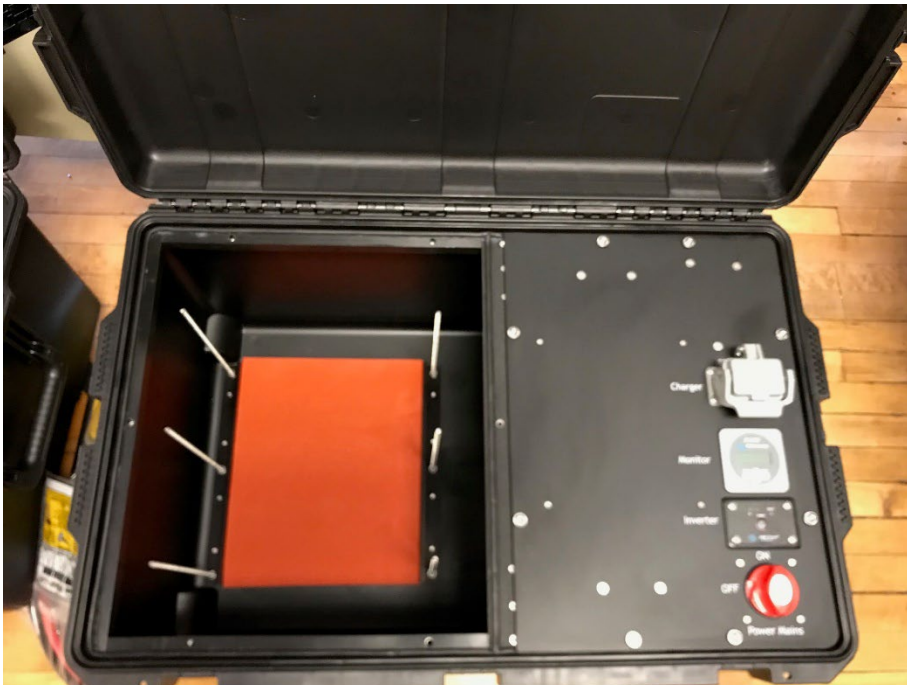

DOCUMENT NUMBER	REVISION NUMBER	DATE
AN007	1.1.0	09/05/2025

Step	Description	Notes
------	-------------	-------

7. Install the back side of the Battery support foam; M24 [71765] into the case.  
The cutout on the bottom of the foam should sit over the wheel well inside the case.

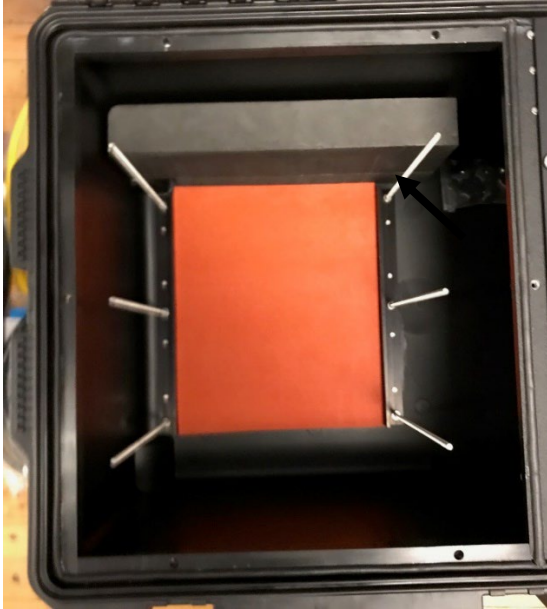

8. Place the first battery into the case. Note the orientation of the battery.





DOCUMENT NUMBER	REVISION NUMBER	DATE
AN007	1.1.0	09/05/2025

Step	Description	Notes
------	-------------	-------

- Place the second battery into the case. Note the orientation of the battery. The terminals of the batteries should be on opposing sides of each other.



DOCUMENT NUMBER	REVISION NUMBER	DATE
AN007	1.1.0	09/05/2025

Step	Description	Notes
------	-------------	-------


10. Insert the second piece of the battery support foam; M24 [71765]. Press the foam firmly down into place as seen below.



DOCUMENT NUMBER	REVISION NUMBER	DATE
AN007	1.1.0	09/05/2025

Step	Description	Notes
------	-------------	-------

11. Install the M24 hold down plate [72917] onto the batteries.

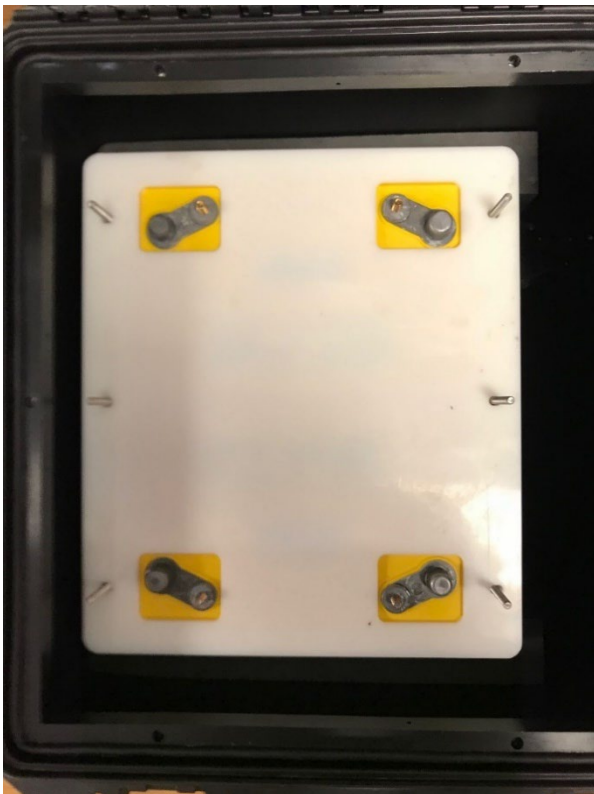

DOCUMENT NUMBER	REVISION NUMBER	DATE
AN007	1.1.0	09/05/2025

Step	Description	Notes
------	-------------	-------

12. Install six (6) M6 female thumb screws [71838]. Tighten down firmly.




13. Gather the battery main leads (2 gauge) [72915]



DOCUMENT NUMBER	REVISION NUMBER	DATE
AN007	1.1.0	09/05/2025

Step	Description	Notes
------	-------------	-------

14. Attach the battery Main leads (2 gauge) into the system. The black 30" cable should be closest the front of the case. Use a 9/16" wrench. Do NOT overtighten. **Be very careful not to touch the battery terminals with your wrench.**

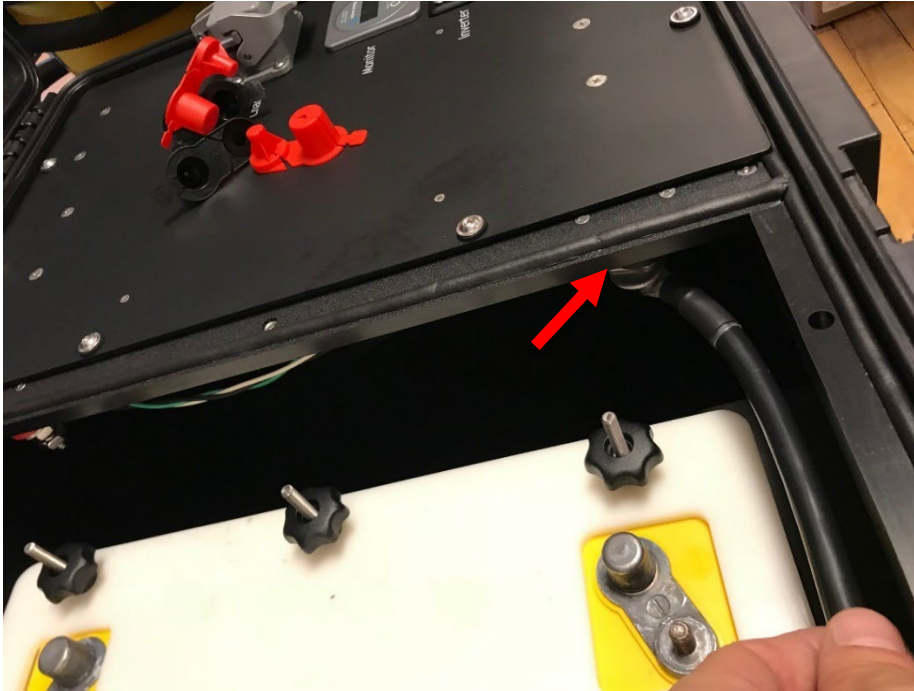




DOCUMENT NUMBER	REVISION NUMBER	DATE
AN007	1.1.0	09/05/2025

Step	Description	Notes
------	-------------	-------

15. Install the red 30" cable to the red terminal in the back of the case. Tighten with a 9/16" wrench. **Be very careful not to touch the battery terminals with your wrench.**

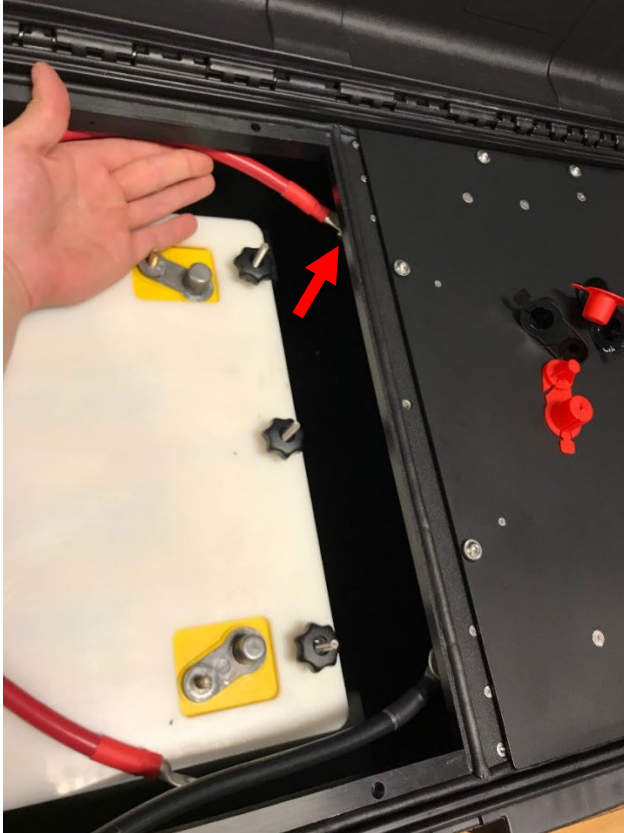

DOCUMENT NUMBER	REVISION NUMBER	DATE
AN007	1.1.0	09/05/2025

Step	Description	Notes
------	-------------	-------

16. Attach the Black negative DC cable to the first battery installed. Assure that the terminal shows a (-) symbol. Use a ½" wrench to tighten. **Be very careful not to touch the battery terminals with your wrench.**



17. Carefully attach the red positive DC cable to the battery that is closest to you. Assure that the terminal shows a (+) symbol. Use a ½" wrench to tighten. **Be very careful not to touch the other battery terminals with your wrench.**



DOCUMENT NUMBER	REVISION NUMBER	DATE
AN007	1.1.0	09/05/2025

Step	Description	Notes
------	-------------	-------


18. Carefully attach the red and black 14" series cable between the two batteries. Attach the red side to the positive terminal of the first battery. Attach the black end to the negative terminal of the second battery. It is normal to see small spark while making this connection. **Be very careful not to touch the other battery terminals with your wrench.**



DOCUMENT NUMBER	REVISION NUMBER	DATE
AN007	1.1.0	09/05/2025

Step	Description	Notes
------	-------------	-------

19. Tighten down the all the connections of the batteries with a ½" wrench. **Be very careful not to touch the battery terminals with your wrench.**

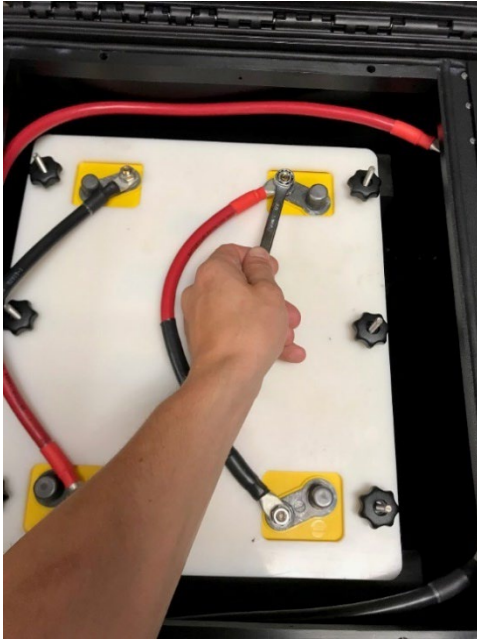

20. At this point, flip the inverter switch to "monitor" and observe the battery monitor to see if the system is receiving idle power. If the display lights up or shows a reading, the system has been properly connected. If the battery monitor does not have a reading, double check your steps and or see troubleshooting section 7.0.




DOCUMENT NUMBER	REVISION NUMBER	DATE
AN007	1.1.0	09/05/2025

Step	Description	Notes
------	-------------	-------

21. If the test was successful, Place the battery storage panel back in place.



22. Reinstall the six (6) M6 male thumb screws [70256]. Tighten snugly by hand. Do NOT overtighten.

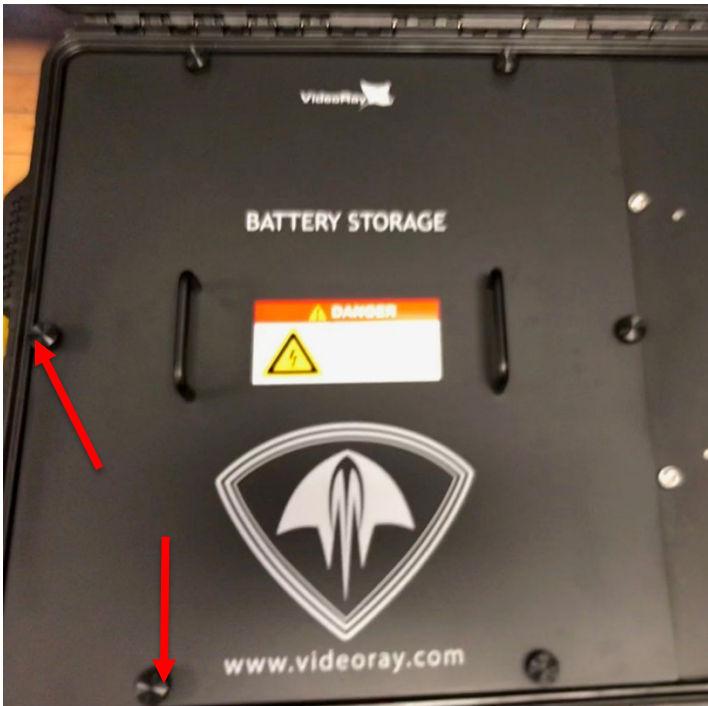



DOCUMENT NUMBER	REVISION NUMBER	DATE
AN007	1.1.0	09/05/2025

Step	Description	Notes
23.	Be sure to load the M24 settings configuration into the battery monitor before using the system. See section 3.0 for further details.	
24.	If the batteries were just charged, assure to set the state of charge to 100%. This can be done quickly by holding the + and – key on the face of the battery monitor for 3 seconds.	
25.	To remove an M24 battery pack simply follow these instructions in reverse.	

## 2.2 2590 Batteries

Required parts:

- Twelve (12) 2590 batteries. ALL 12 batteries **MUST** be of the same battery chemistry.
- [72798] 2590 integration kit
  - [72881] 2590 base tray
  - [72882] 2590 battery hold down plate
  - [72916] 2590 battery harness

Step	Description	Notes
26.	Refer to section 2.1 & 2.3 for the removal process of M24 battery packs or 6T battery packs.	
27.	Warning; ALL twelve (12) batteries <b><u>MUST</u></b> be of the same battery chemistry	

DOCUMENT NUMBER	REVISION NUMBER	DATE
AN007	1.1.0	09/05/2025

Step	Description	Notes
------	-------------	-------

28. Open the pelican case lid to access the battery storage panel.




29. Assure that the power main switch is set to the "OFF" position, and that nothing is plugged into the PPS power outlet. Assure the inverter switch is set to 'OFF'




DOCUMENT NUMBER	REVISION NUMBER	DATE
AN007	1.1.0	09/05/2025

Step	Description	Notes
------	-------------	-------

30. \*\*\*Read through all of these steps prior to starting. **Caution** high risk of electric shock. Be very cautious of your tools, touching multiple terminals with your tool could result in a DC short. \*\*\*

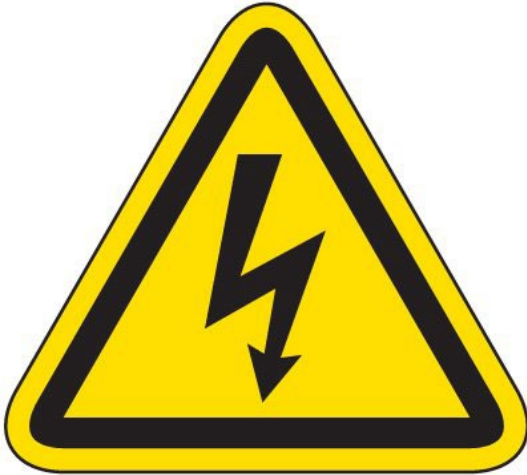

31. Remove the six (6) M6 male thumb screws [70256] securing the battery storage panel in place. Store these thumb screws safely to the side.

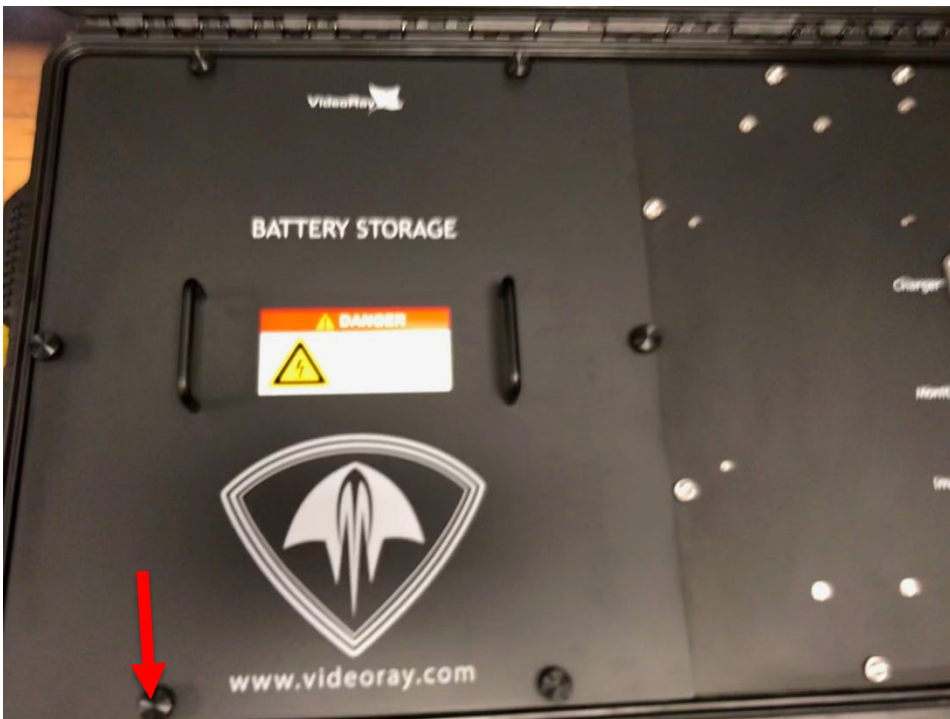


DOCUMENT NUMBER	REVISION NUMBER	DATE
AN007	1.1.0	09/05/2025

Step	Description	Notes
------	-------------	-------

32. Remove the battery storage panel and store it safely to the side.



33. Install the 2590 base plate [72881] in the case. Notice the orientation of the plate, the notches circled should be facing toward the inside of the box.

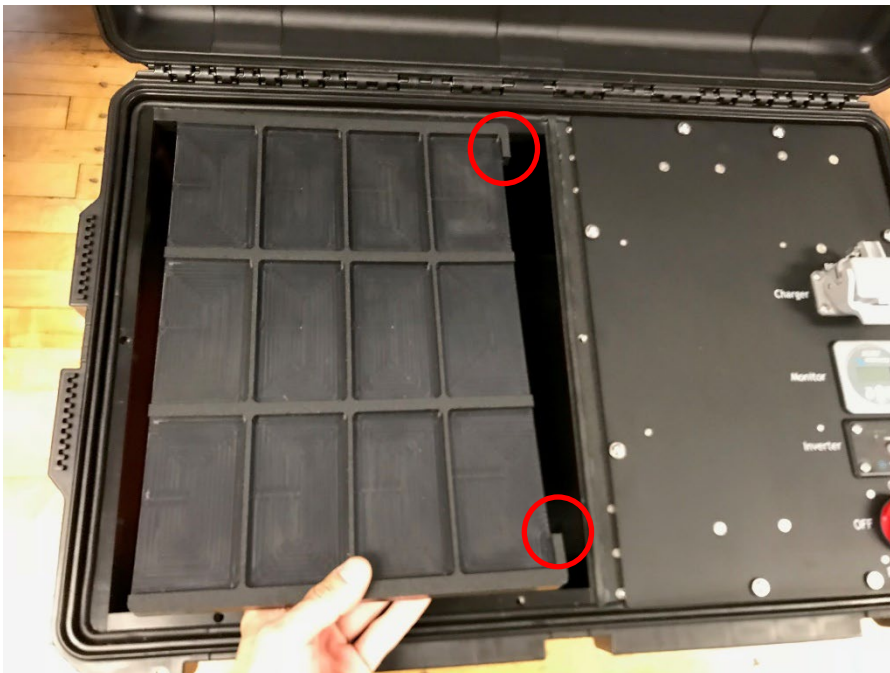




DOCUMENT NUMBER	REVISION NUMBER	DATE
AN007	1.1.0	09/05/2025

Step	Description	Notes
------	-------------	-------

34. Install the 2590 base plate[72881] all the way to the base of the case.

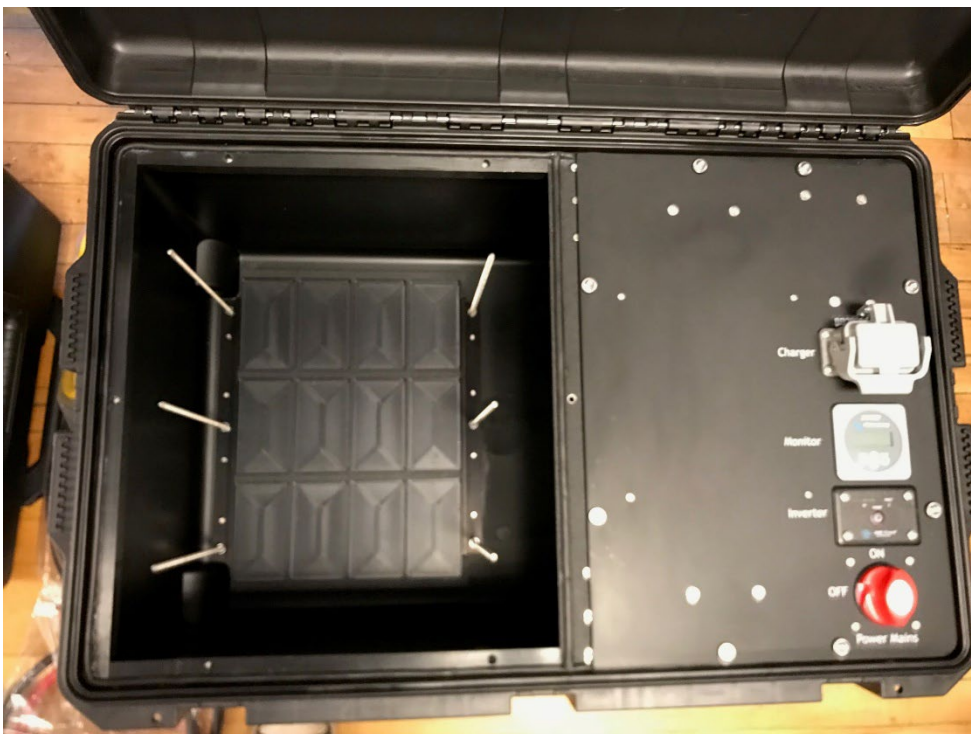



DOCUMENT NUMBER	REVISION NUMBER	DATE
AN007	1.1.0	09/05/2025

Step	Description	Notes
------	-------------	-------

35. Install twelve (12) 2590 batteries into the case. For any questions regarding battery type please see [section 1.4](#) for approved battery packs. Install batteries in the orientation seen below.




36.




DOCUMENT NUMBER	REVISION NUMBER	DATE
AN007	1.1.0	09/05/2025

Step	Description	Notes
------	-------------	-------

37. Gather the 2590 battery harness [72916]

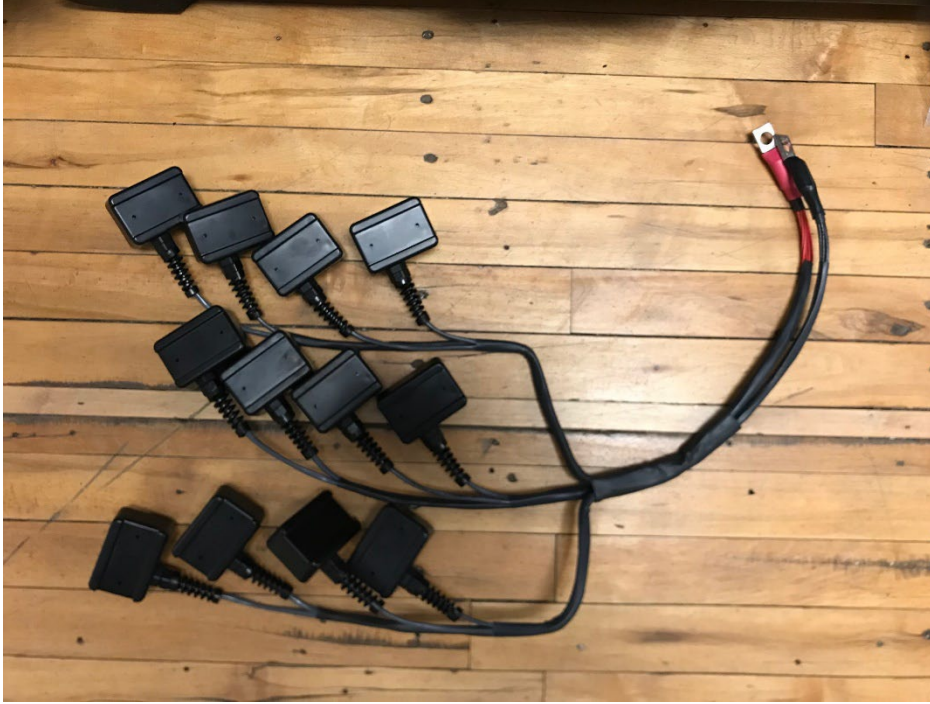

38. Place the 2590 battery harness [72996] in the case. The negative side of the harness should be attached to the DC bus closest to you. The positive side of the harness should be attached to the DC bus furthest from you. Use a 9/16" wrench, do NOT overtighten.

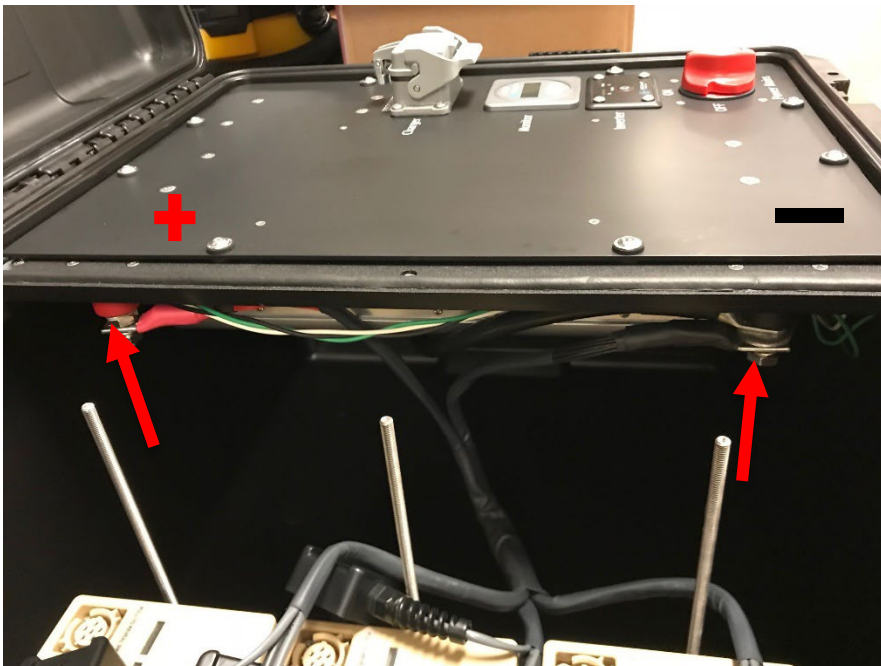

DOCUMENT NUMBER	REVISION NUMBER	DATE
AN007	1.1.0	09/05/2025

Step	Description	Notes
------	-------------	-------

39. Connect the battery harness to each battery. Follow the pattern shown below. Notice where the leads of the harness sit in respect to the threaded rods.



40. At this point, flip the inverter switch to “monitor” and observe the battery monitor to see if the system is receiving idle power. If the display lights up or shows a reading, the system has been properly connected. If the battery monitor does not have a reading, double check your steps and or see troubleshooting section 7.0.





DOCUMENT NUMBER	REVISION NUMBER	DATE
AN007	1.1.0	09/05/2025

Step	Description	Notes
------	-------------	-------

41. Install the 2590 battery hold down plate [72882]. Use six (6) M6 female thumb screws[71818] to secure the plate.



DOCUMENT NUMBER	REVISION NUMBER	DATE
AN007	1.1.0	09/05/2025

Step	Description	Notes
------	-------------	-------

42. Place the battery storage panel back in place.






DOCUMENT NUMBER	REVISION NUMBER	DATE
AN007	1.1.0	09/05/2025

Step	Description	Notes
------	-------------	-------

43. Reinstall the six (6) M6 male thumb screws [70256]. Tighten snugly by hand. Do NOT overtighten.

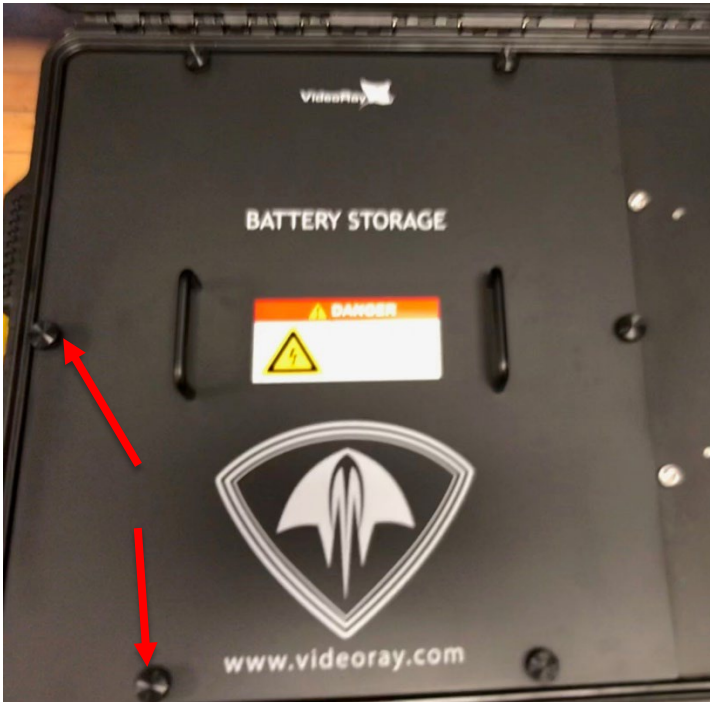

44. Be sure to load the 2590 settings configuration into the battery monitor before using the system. See section 3.0 for further details.
45. If the batteries were just charged, assure to set the state of charge to 100%. This can be done quickly by holding the + and – key for 3 seconds.
46. To remove an 2590 battery pack simply follow these instructions in reverse.

DOCUMENT NUMBER	REVISION NUMBER	DATE
AN007	1.1.0	09/05/2025

## 2.3 6T Battery

Required parts:

- One (1) 6T battery.

[72915] Battery main leads (2 Gauge)

- Black 36" positive cable

- Red 36" negative cable

[72796] 6T battery Integration kit

- 6T battery pack hold down plate

- Battery support foam; 6T

Step	Description	Notes
------	-------------	-------

47. Refer to section 2.1 & 2.2 for the removal process of M24 battery packs or 2590 battery packs.

48. Open the pelican case lid to access the battery storage panel.



DOCUMENT NUMBER	REVISION NUMBER	DATE
AN007	1.1.0	09/05/2025

Step	Description	Notes
------	-------------	-------

49. Assure that the power main switch is set to the “OFF” position, and that nothing is plugged into the PPS power outlet. Assure the inverter switch is set to ‘OFF’




50. \*\*\*Read through all of these steps prior to starting. **Caution** high risk of electric shock. Be very cautious of your tools, touching multiple terminals with your tool could result in a DC short. \*\*\*




DOCUMENT NUMBER	REVISION NUMBER	DATE
AN007	1.1.0	09/05/2025

Step	Description	Notes
------	-------------	-------

51. Remove the six (6) M6 male thumb screws [70256] securing the battery storage panel in place. Store these thumb screws safely to the side.

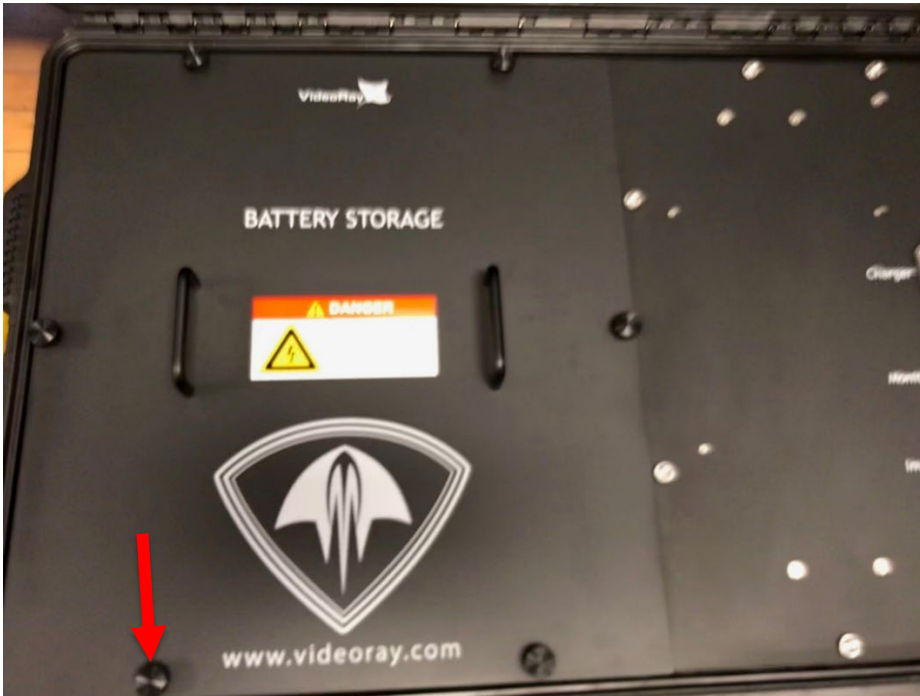


52. Remove the battery storage panel and store it safely to the side.

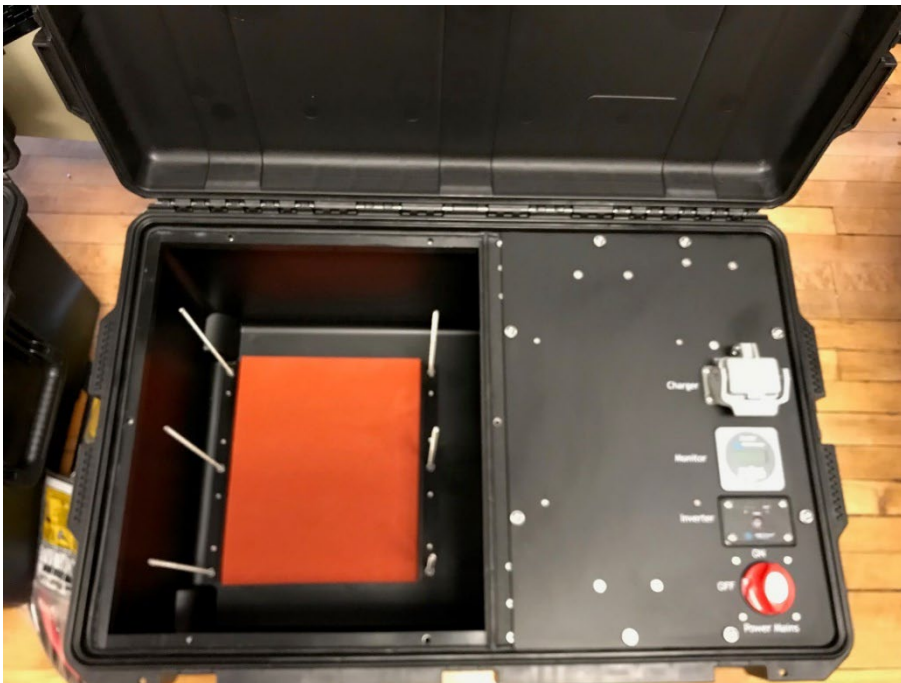

DOCUMENT NUMBER	REVISION NUMBER	DATE
AN007	1.1.0	09/05/2025

Step	Description	Notes
------	-------------	-------

53. Install the Battery support foam; 6T [71767] into the case. Assure the cut outs for the wheel wells of the care are in the correct orientation.

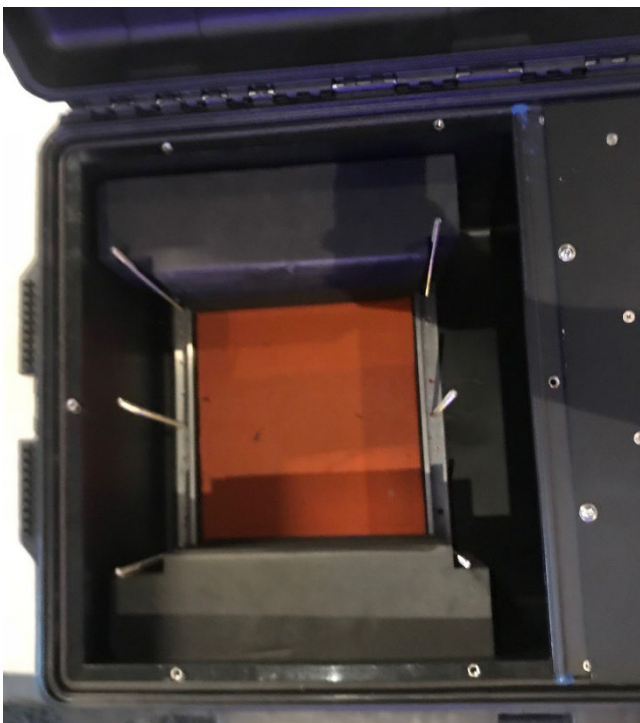

54. Place the 6T battery between the foam in the following orientation





DOCUMENT NUMBER	REVISION NUMBER	DATE
AN007	1.1.0	09/05/2025

Step	Description	Notes
------	-------------	-------

55. Press the 6T battery down into the case. Note the orientation of the battery. Assure the handles are tucked between the threaded rods



56. Install the 6T hold down plate [71605] onto the battery.




DOCUMENT NUMBER	REVISION NUMBER	DATE
AN007	1.1.0	09/05/2025

Step	Description	Notes
------	-------------	-------

57. Install six (6) M6 female thumb screws [71838]. Tighten snugly by hand.




58. Attach the Battery Main leads (2 gauge) into the system.  
Install the negative cable closest to the front of the case. Use a 9/16 wrench. Do NOT overtighten.

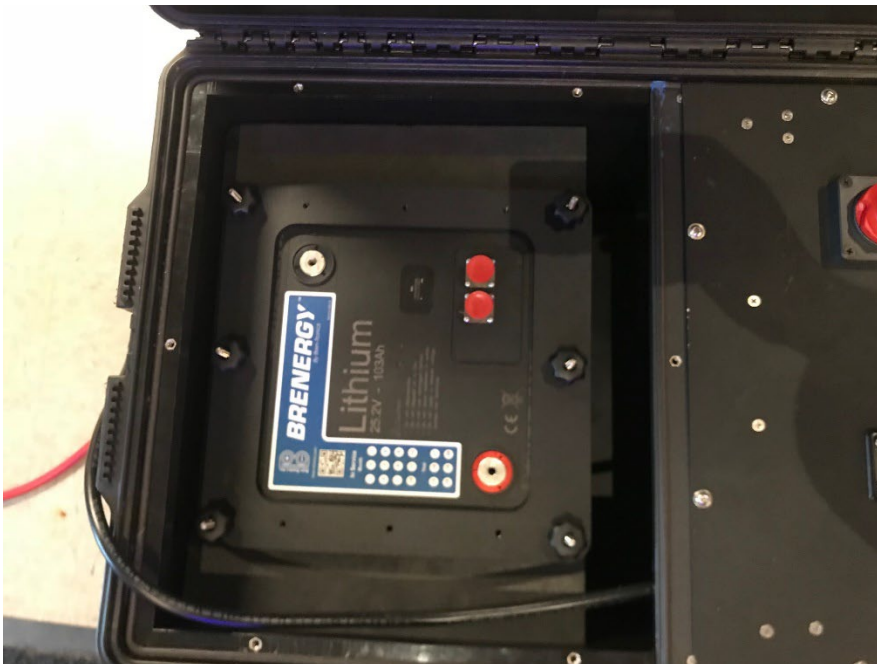

DOCUMENT NUMBER	REVISION NUMBER	DATE
AN007	1.1.0	09/05/2025

Step	Description	Notes
------	-------------	-------

59. Install the positive cable closer to the back of the case. Use a 9/16 wrench. Do NOT overtighten.

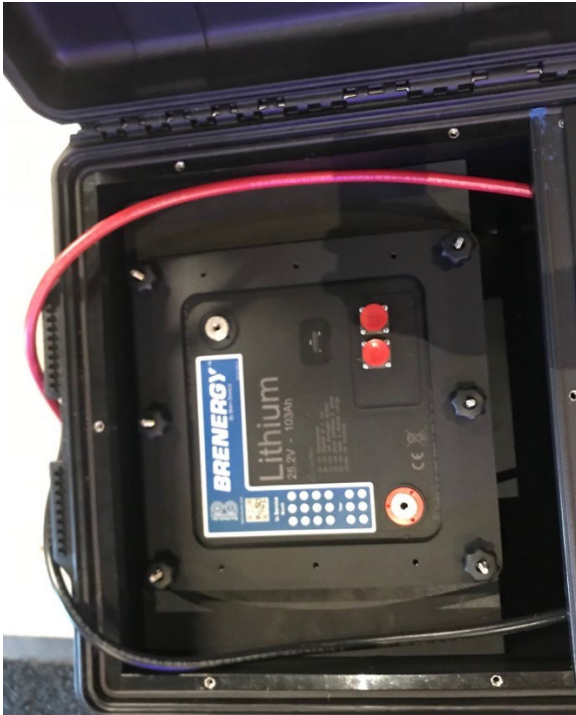

60. Attach the main leads to the battery. Attach the negative - DC cable to the black terminal of the battery labeled -. Use a T20 torque bit to tighten.



DOCUMENT NUMBER	REVISION NUMBER	DATE
AN007	1.1.0	09/05/2025

Step	Description	Notes
------	-------------	-------

61. The red positive + DC cable should connect to the positive + battery terminal. It is normal to see small spark while making this connection. Use a T20 torque bit to tighten.



62. Assure all connections are tight while being very cautious of your tools. Touching multiple terminals with your tool could result in a DC short. Use a T20 torque bit to tighten.



DOCUMENT NUMBER	REVISION NUMBER	DATE
AN007	1.1.0	09/05/2025

Step	Description	Notes
------	-------------	-------

63. At this point, flip the inverter switch to “monitor” and observe the battery monitor to see if the system is receiving idle power. If the display lights up or shows a reading, the system has been properly connected. If the battery monitor does not have a reading, double check your steps and or see troubleshooting section 7.0.





DOCUMENT NUMBER	REVISION NUMBER	DATE
AN007	1.1.0	09/05/2025

Step	Description	Notes
------	-------------	-------


64. Place the battery storage panel back in place.



DOCUMENT NUMBER	REVISION NUMBER	DATE
AN007	1.1.0	09/05/2025

Step	Description	Notes
------	-------------	-------

65. Reinstall the six (6) M6 male thumb screws [70256]. Tighten snugly by hand. Do NOT overtighten.

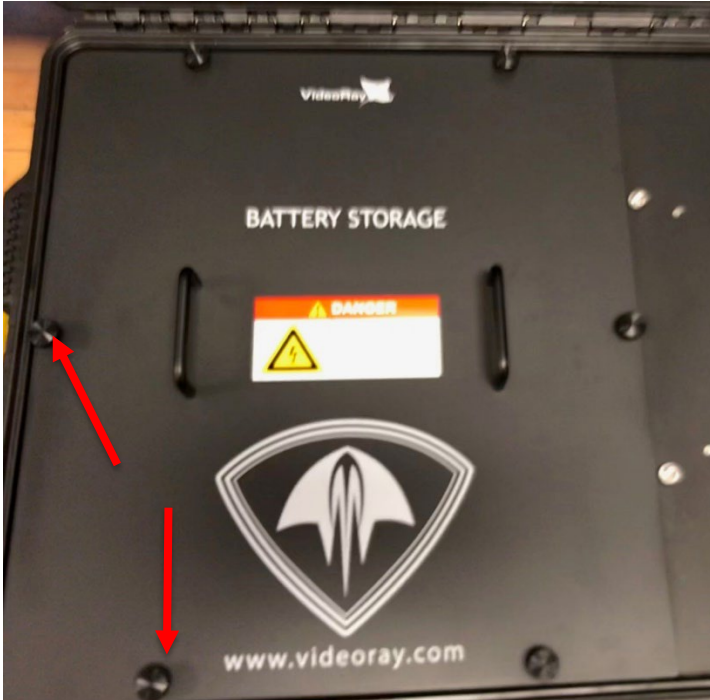

66. Be sure to load the 6T battery settings configuration into the battery monitor before using the system. See section 3.0 for further details.
67. To remove an 6T battery pack simply follow these instructions in reverse.

DOCUMENT NUMBER	REVISION NUMBER	DATE
AN007	1.1.0	09/05/2025

## 3.0 CHARGING

Required parts: PPS charger [73507]

Step	Description	Notes
------	-------------	-------

68. Open the latches of the pelican case




69. Whenever charging a PPS System assure that the battery storage compartment is open prior to charging.

**CAUTION: DO NOT USE THE CYCLLE SADIATOR CHARGER TO CHARGE 2590 LI-ION BATTERIES FOR USE WITH M24 OR 6T BATTERY PACKS ONLY**

DOCUMENT NUMBER	REVISION NUMBER	DATE
AN007	1.1.0	09/05/2025

Step	Description	Notes
------	-------------	-------


70. Remove the six (6) M6 male thumb screws [70256] and remove the battery compartment lid.

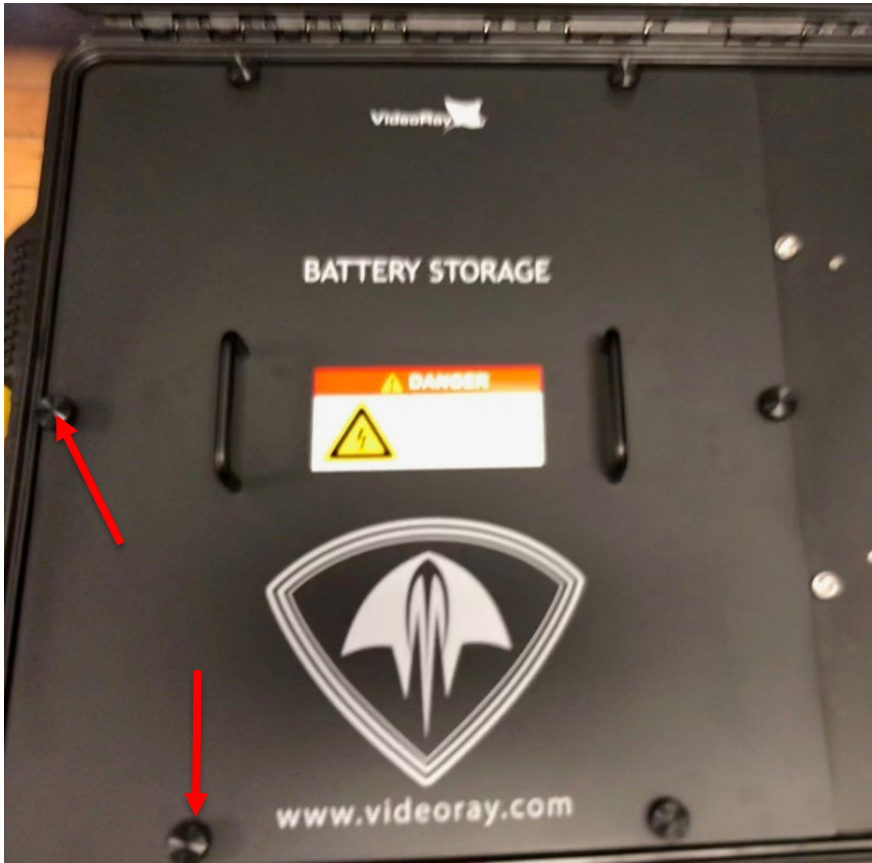

DOCUMENT NUMBER	REVISION NUMBER	DATE
AN007	1.1.0	09/05/2025

Step	Description	Notes
------	-------------	-------

71. Ensure that the charger is configured for the battery chemistry you are trying to charge. See charger configuration Section 3.3 for more information.

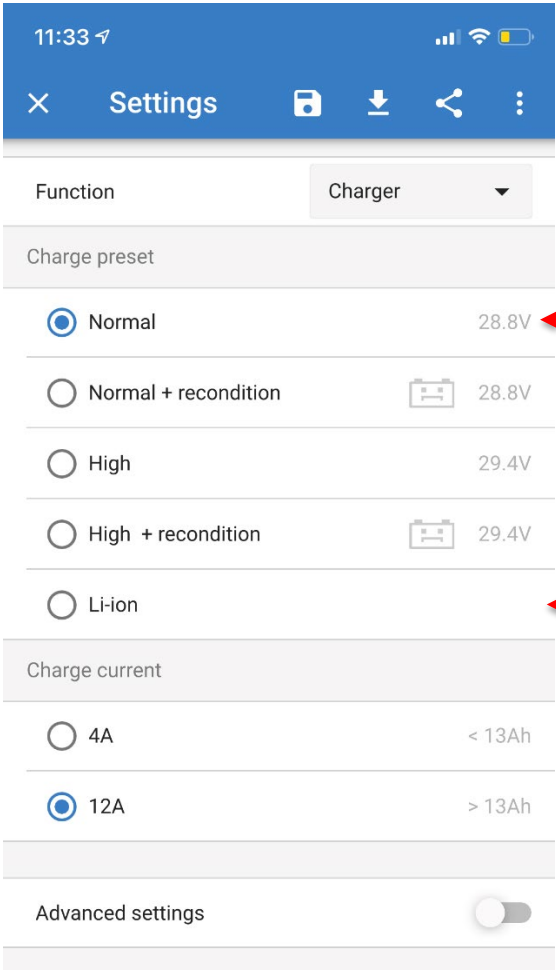

11:33

Settings

Function Charger

Charge preset

☒ Normal 28.8V **M24**

☐ Normal + recondition 28.8V

☐ High 29.4V

☐ High + recondition 29.4V

☐ Li-ion **6T**

Charge current

☐ 4A < 13Ah

☒ 12A > 13Ah


Advanced settings



DOCUMENT NUMBER	REVISION NUMBER	DATE
AN007	1.1.0	09/05/2025

Step	Description	Notes
------	-------------	-------

72. Gather the two parts of the charging cord.

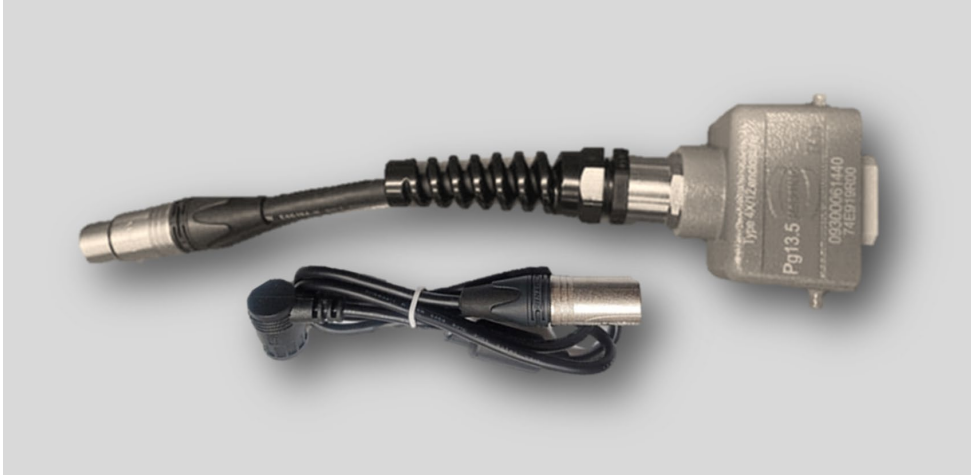

73. Align and connect the two XLR ends of the charging cords, push firmly to lock.



DOCUMENT NUMBER	REVISION NUMBER	DATE
AN007	1.1.0	09/05/2025

Step	Description	Notes
------	-------------	-------

74. Plug the cord into the charging port of the charger. Twist connector cap clockwise to lock in to place.



75. Open the charger port on the panel of the PPS system.



DOCUMENT NUMBER	REVISION NUMBER	DATE
AN007	1.1.0	09/05/2025

Step	Description	Notes
------	-------------	-------

76. Ensure the inverter switch is in the 'Monitor' position before continuing. The display of the monitor should show a reading. If not, see troubleshooting section 7.0



77. Take the connector from the PPS charger and plug it into the charging port with the printed side facing towards you.



DOCUMENT NUMBER	REVISION NUMBER	DATE
AN007	1.1.0	09/05/2025

Step	Description	Notes
------	-------------	-------

78. Lift up on the latch to secure the connector in place.



79. Plug the connector of the AC power cord into the charger's AC port.






DOCUMENT NUMBER	REVISION NUMBER	DATE
AN007	1.1.0	09/05/2025

Step	Description	Notes
------	-------------	-------

80. Plug the charger's power cord into AC power. Once plugged in, the charger will power on.

Use the two buttons to cycle through the charging profiles until the desired profile is displayed. There are only two profiles compatible for the PPS – 'Lead Acid' for M24 and 2590 batteries or '6T Lithium' for a 6T Lithium battery.

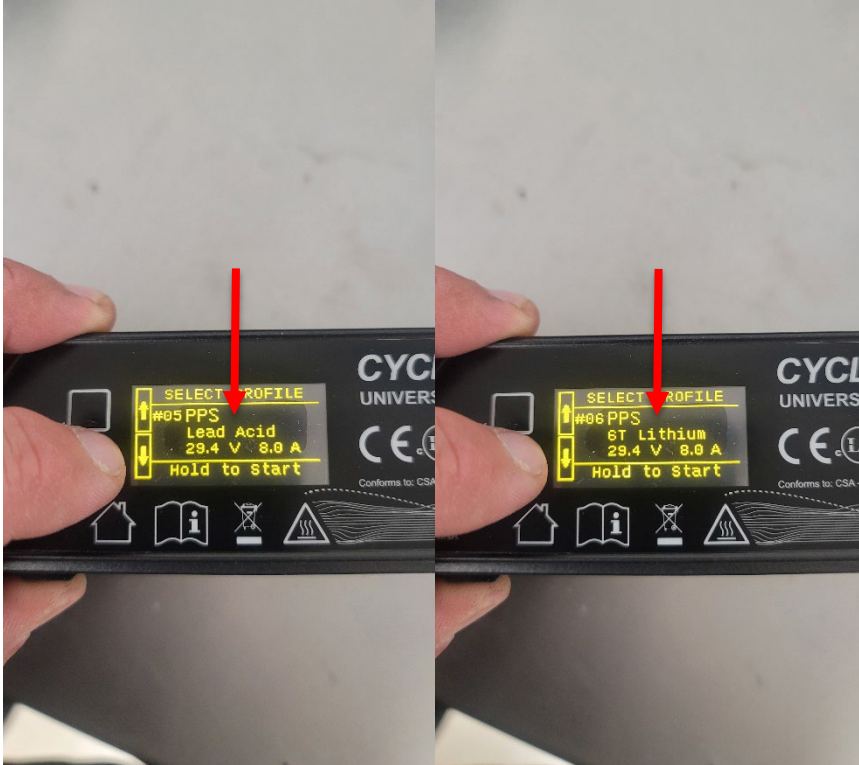

81. When the desired profile is displayed, press and hold the bottom button and release when OKAY is displayed.





DOCUMENT NUMBER	REVISION NUMBER	DATE
AN007	1.1.0	09/05/2025

Step	Description	Notes
------	-------------	-------

82. If CONNECT BATTERY is displayed after pressing and releasing the bottom button, press and hold the bottom button again and then release when Force Start appears.



DOCUMENT NUMBER	REVISION NUMBER	DATE
AN007	1.1.0	09/05/2025

Step	Description	Notes
------	-------------	-------

83. It will take a few seconds for the battery to begin charging. The battery icon on the left side of the display will then indicate charging status.



84. At this point you should see the voltage starting to increase on the battery monitor display.



85. See the Victron app for further details on charging. Charging typically takes between 6-12 hours depending on the depth of discharge and size of the battery.

DOCUMENT NUMBER	REVISION NUMBER	DATE
AN007	1.1.0	09/05/2025

## 4.0 SETTINGS CONFIGURATION

### 4.1 Battery Monitor Configuration by Bluetooth connectivity (quick method)

Required parts:


Smartphone with Bluetooth connectivity

If no Bluetooth device is available, please see section 3.2 for manual programming instructions.

Step	Description	Notes
------	-------------	-------

86. \*\* There must be a battery pack installed within the PPS to allow for Bluetooth connectivity \*\*


87. Using your smart phone or tablet access the app store and search for “Victron connect”, Download the app.

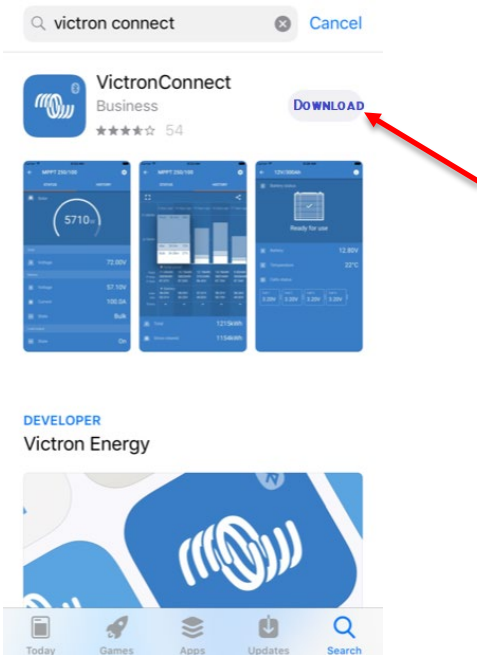


DOCUMENT NUMBER	REVISION NUMBER	DATE
AN007	1.1.0	09/05/2025

Step	Description	Notes
------	-------------	-------


88. Once installed, open the application. The default Pin code is 000000.  
The first screen will show you available battery monitors in your area. **\*\*Assure your Bluetooth is ON\*\***

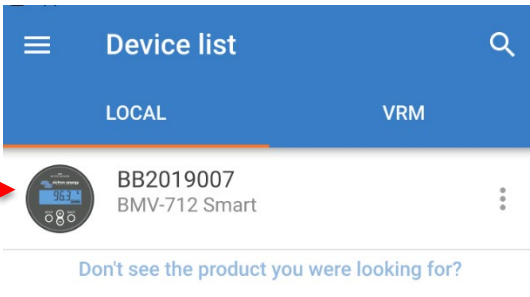

The portable power supply is listed by the S/N of the unit. If there are multiple PPS systems nearby, check the S/N of the specific PPS of interest. The S/N location is marked by the red X.

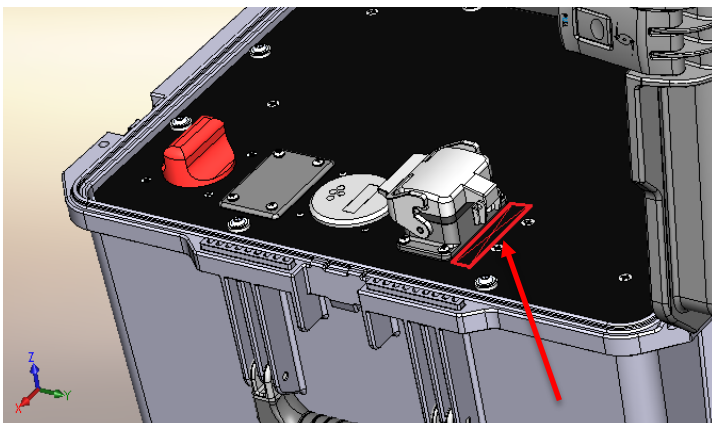

89. The default pin code is 000000. If you forget your pin code, See troubleshooting; section 7.0

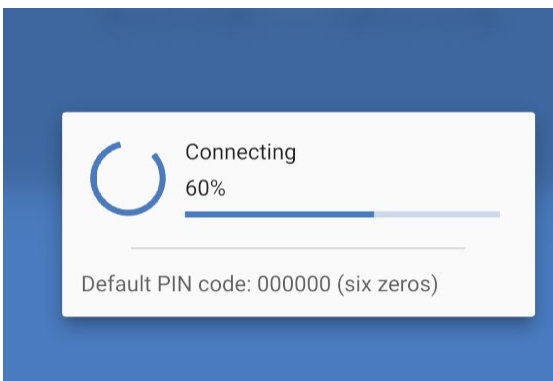

90. If there are any new available firmware updates, you will be prompted for them now. Allow the firmware to be updated.

DOCUMENT NUMBER	REVISION NUMBER	DATE
AN007	1.1.0	09/05/2025

Step	Description	Notes
------	-------------	-------

91. Until you change your pin code from the default, or select the “do not warn me again” box, you will be prompted to change your pin each time you connect to the product. If you need to change your pincode or forget your pincode, see troubleshooting; section 7.0

**Unsecured access!**

You are connected using the default Bluetooth PIN code. We recommend you change the PIN to prevent unauthorised connections. You can change the PIN code in the product info page at any time.

[Don't worry, it is always possible to reset to the default PIN code.](#)

☐ Do not warn me again for this product


NOT NOW    CHANGE PIN CODE



DOCUMENT NUMBER	REVISION NUMBER	DATE
AN007	1.1.0	09/05/2025

Step	Description	Notes
------	-------------	-------

92. This is the main menu of the battery monitoring system. Various data can be observed from this screen before, during, and after the use of a PPS system.

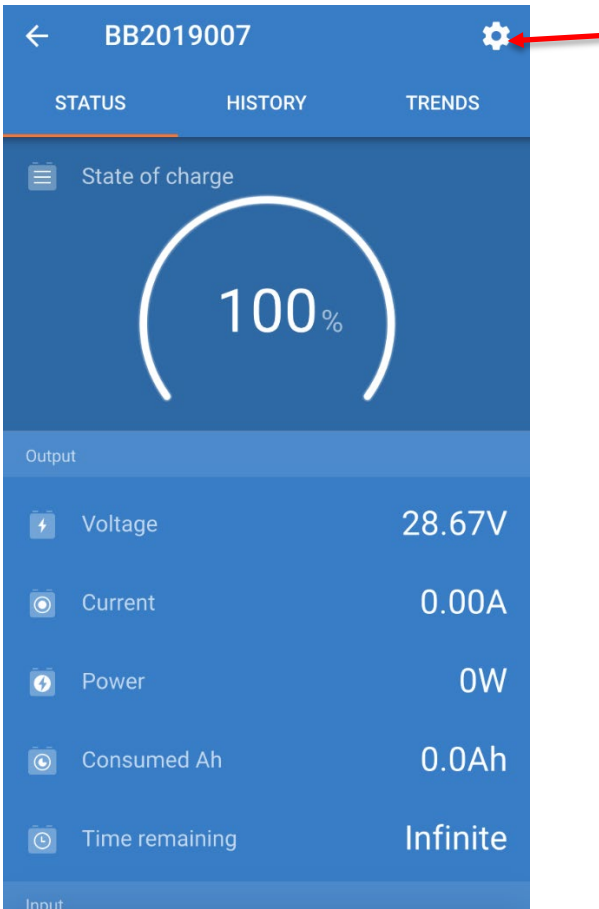


To access battery monitor settings, click the cog symbol in the top right corner.


DOCUMENT NUMBER	REVISION NUMBER	DATE
AN007	1.1.0	09/05/2025

Step	Description	Notes
------	-------------	-------

93. Depending on the battery pack used, a settings profile must be loaded. Select the load button.

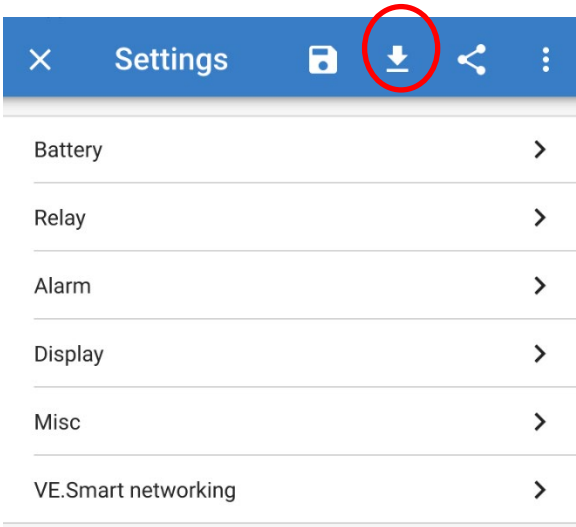


94. Select which battery pack is being used. If these options are not available on your screen, visit [https://kb.videoray.com/wp-content/uploads/2023/02/battery\\_monitor\\_setting\\_profiles.zip](https://kb.videoray.com/wp-content/uploads/2023/02/battery_monitor_setting_profiles.zip) to download the following settings profiles.

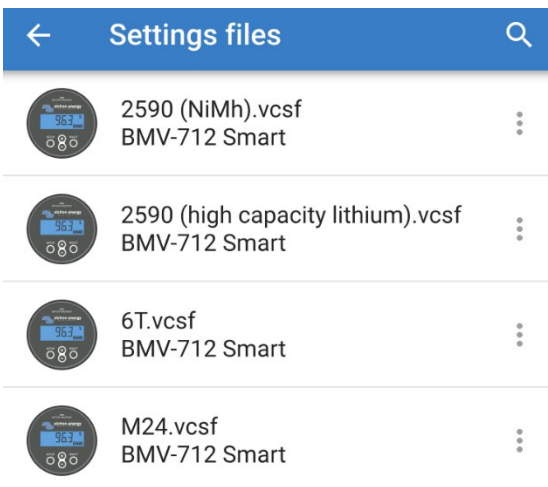


DOCUMENT NUMBER	REVISION NUMBER	DATE
AN007	1.1.0	09/05/2025

Step	Description	Notes
------	-------------	-------

95. There will be a prompt that shows the difference between current settings and the selected settings. Press apply.

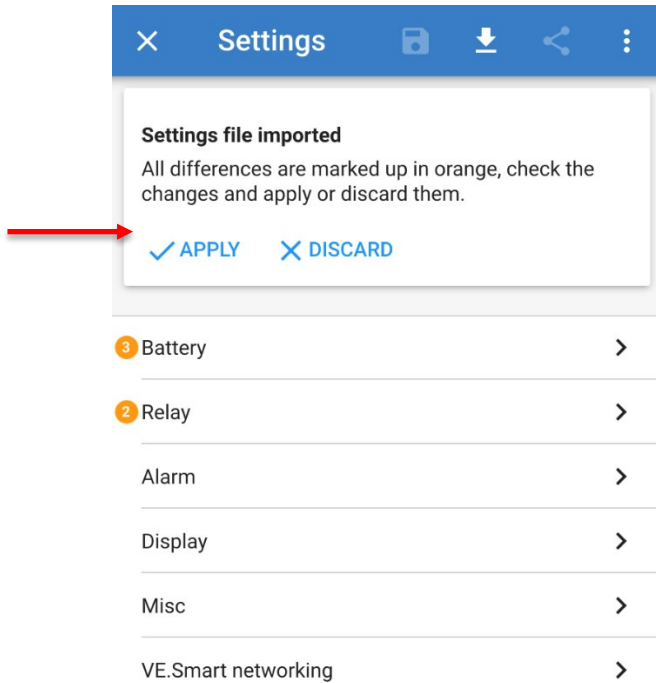


96. After, you will be brought back to the main settings menu. Click on battery.

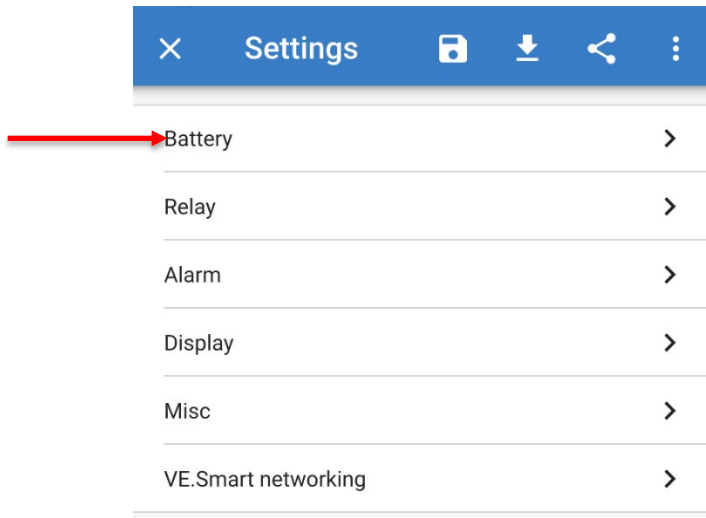

DOCUMENT NUMBER	REVISION NUMBER	DATE
AN007	1.1.0	09/05/2025

Step	Description	Notes
------	-------------	-------

97. Within the battery menu, first tune the zero current calibration by clicking "Calibrate"

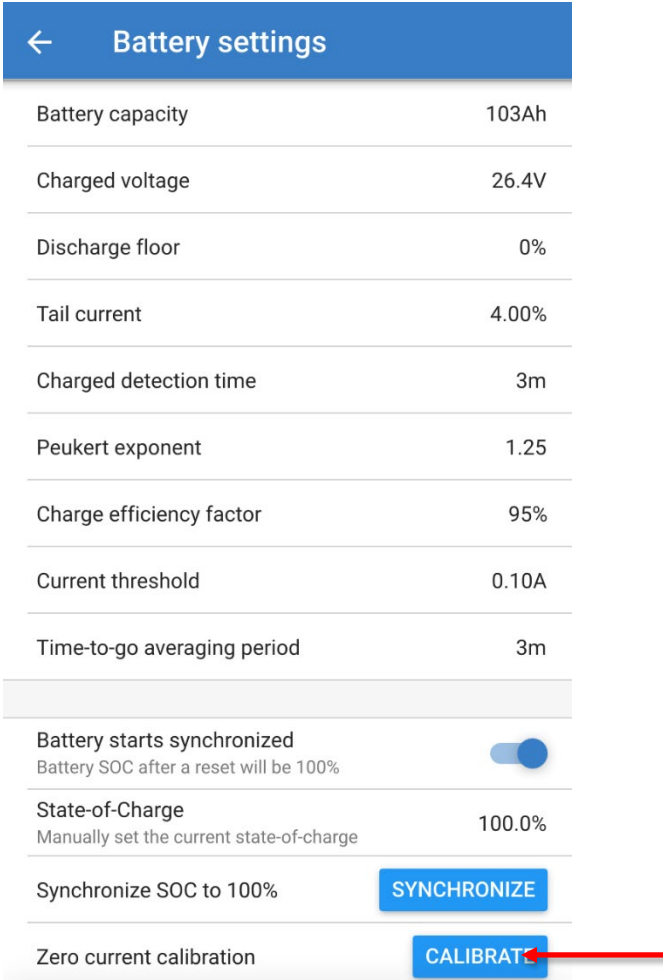

**Battery settings**

Battery capacity 103Ah

Charged voltage 26.4V

Discharge floor 0%

Tail current 4.00%

Charged detection time 3m

Peukert exponent 1.25

Charge efficiency factor 95%

Current threshold 0.10A

Time-to-go averaging period 3m

Battery starts synchronized ☒  
Battery SOC after a reset will be 100%

State-of-Charge 100.0%  
Manually set the current state-of-charge

Synchronize SOC to 100% **SYNCHRONIZE**


Zero current calibration **CALIBRATE**

DOCUMENT NUMBER	REVISION NUMBER	DATE
AN007	1.1.0	09/05/2025

Step	Description	Notes
------	-------------	-------

98. So long as the battery pack is fully charged, click “synchronize” to set the state of charge to 100%. As the PPS is used, the battery monitor gathers data on the battery and use cycles; this allows for a more accurate reading of SOC and remaining time-to-go. **This step should be completed after every recharge.**

You can also select to manually input the state of charge.

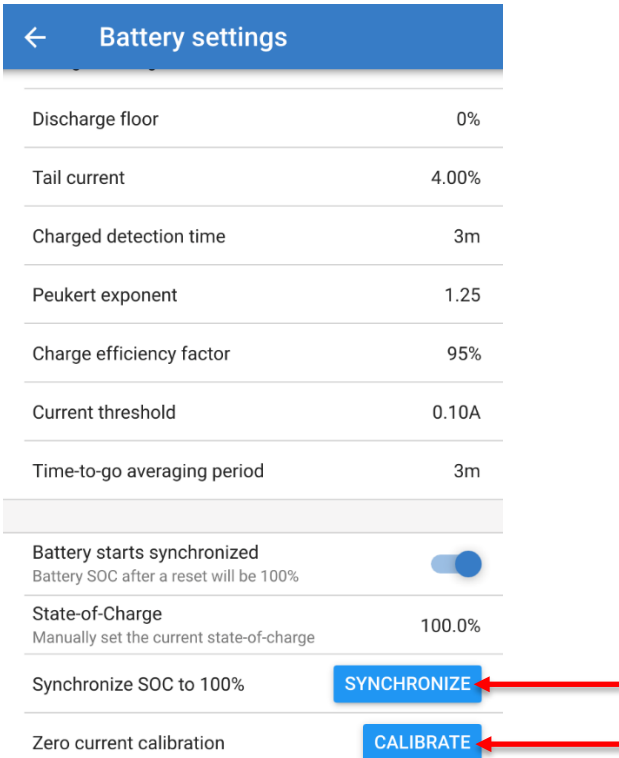

← Battery settings

Discharge floor 0%

Tail current 4.00%

Charged detection time 3m

Peukert exponent 1.25

Charge efficiency factor 95%

Current threshold 0.10A

Time-to-go averaging period 3m

Battery starts synchronized ☒ Battery SOC after a reset will be 100%

State-of-Charge 100.0% Manually set the current state-of-charge

Synchronize SOC to 100% **SYNCHRONIZE**

Zero current calibration **CALIBRATE**



DOCUMENT NUMBER	REVISION NUMBER	DATE
AN007	1.1.0	09/05/2025

## 4.2 Battery Monitor Manual Configuration (long method)

Step	Description	Notes
------	-------------	-------

99. \*\* There must be a battery pack installed within the PPS to allow for Bluetooth connectivity \*\*
100. Assure that the power main switch is set to the "OFF" position, and that nothing is plugged into the PPS power outlet.



101. Hold the 'Setup' button of the display of the battery monitor for 5 seconds.



DOCUMENT NUMBER	REVISION NUMBER	DATE
AN007	1.1.0	09/05/2025

Step	Description	Notes
------	-------------	-------

102. You have now entered the settings menu. Use the +/- buttons to page between settings 1-69. Click the select button to enter a particular setting menu, click the setup menu to return to the main settings menu.



103. Press the select button on setting **number 1**, set the value of **Battery Capacity** in accordance with the battery installed in the system.

M24	58 Ah
6T	103 Ah
2590 (Lithium)	110 Ah
2590 (NiMh)	43 Ah

104. Press the select button on setting **number 2**, set the value of **Nominal Voltage** in accordance with the battery installed in the system.

M24	26.0
6T	28.0
2590 (Lithium)	32.0
2590 (NiMh)	26.0

105. Assure the system is not being used and drawing energy...Press the select button on setting **number 9**, press select to set the zero-current calibration.

106. So long as the battery is fully charged, press the select button on setting **number 10**, press select to synchronize the battery SOC. This should be done after every charge cycle to allow the system to collect data on the battery being used.

107. Press the select button on setting **number 18**, set the value of **Low Voltage Cutoff** in accordance with the battery installed in the system.

M24	0.0
6T	0.0
2590 (Lithium)	24.0
2590 (NiMh)	19.0

DOCUMENT NUMBER	REVISION NUMBER	DATE
AN007	1.1.0	09/05/2025


Step	Description	Notes								
108.	Press the select button on setting <b>number 19</b> , set the value to <b>Clear the Low Voltage Cutoff</b> in accordance with the battery installed in the system.									
	<table><tr><td>M24</td><td>0.0</td></tr><tr><td>6T</td><td>0.0</td></tr><tr><td>2590 (Lithium)</td><td>25.5</td></tr><tr><td>2590 (NiMh)</td><td>20.5</td></tr></table>	M24	0.0	6T	0.0	2590 (Lithium)	25.5	2590 (NiMh)	20.5	
M24	0.0									
6T	0.0									
2590 (Lithium)	25.5									
2590 (NiMh)	20.5									
109.	Press the select button on setting <b>number 33</b> , set the value of <b>Low SOC Alarm</b> in accordance with the battery installed in the system.									
	<table><tr><td>M24</td><td>60%</td></tr><tr><td>6T</td><td>20%</td></tr><tr><td>2590 (Lithium)</td><td>20%</td></tr><tr><td>2590 (NiMh)</td><td>50%</td></tr></table>	M24	60%	6T	20%	2590 (Lithium)	20%	2590 (NiMh)	50%	
M24	60%									
6T	20%									
2590 (Lithium)	20%									
2590 (NiMh)	50%									
110.	Press the select button on setting <b>number 34</b> , set the value of <b>Clear SOC Alarm</b> in accordance with the battery installed in the system.									
	<table><tr><td>M24</td><td>70%</td></tr><tr><td>6T</td><td>30%</td></tr><tr><td>2590 (Lithium)</td><td>30%</td></tr><tr><td>2590 (NiMh)</td><td>60%</td></tr></table>	M24	70%	6T	30%	2590 (Lithium)	30%	2590 (NiMh)	60%	
M24	70%									
6T	30%									
2590 (Lithium)	30%									
2590 (NiMh)	60%									
111.	The settings are now complete. click the setup menu to return to the main settings menu. Click the setup button again to return to the main display.									
112.	For additional information or to perform a reset of the battery monitor, See the Battery monitor manual included with the standard accessories kit listed in Section 1.3.1.									

DOCUMENT NUMBER	REVISION NUMBER	DATE
AN007	1.1.0	09/05/2025

### 4.3 PPS2412 Charger Configuration (Bluetooth Only)


Step	Description	Notes
------	-------------	-------

113. Using your smart phone or tablet access the app store and search for “Victron connect”, Download the app.

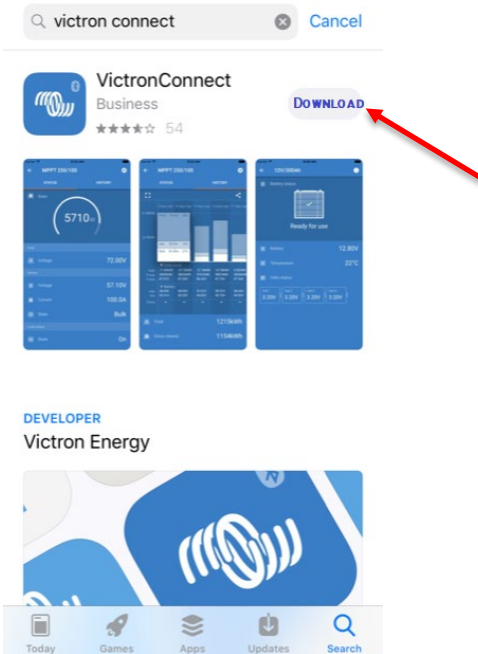

114. Assure that your PPS charger is plugged in to an AC outlet and powered on. You should see lights flashing, indicating its status.


115. Find the App and launch it.

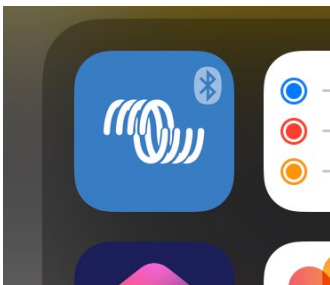

Step	Description	Notes
------	-------------	-------

116.

The App will show you the devices available near you. Your actual PPS system may also appear. Be sure to select the charger.

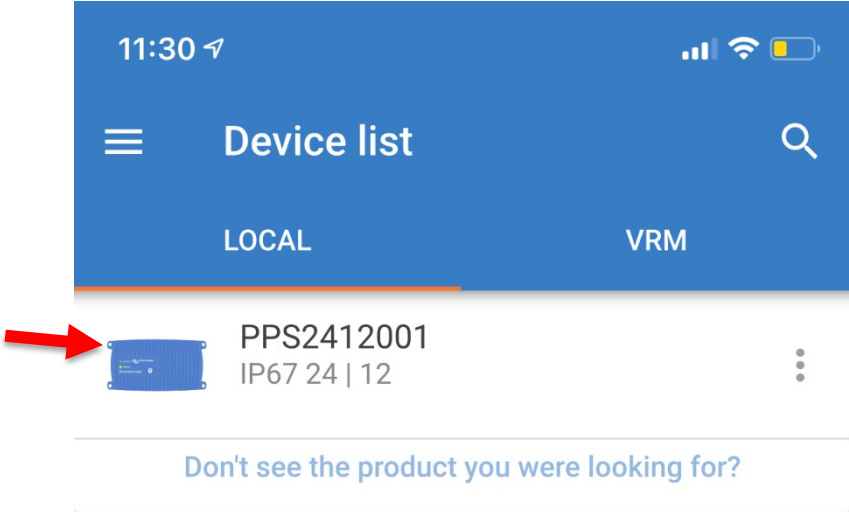




DOCUMENT NUMBER	REVISION NUMBER	DATE
AN007	1.1.0	09/05/2025

Step	Description	Notes
------	-------------	-------


117. The default pin code is 000000. If you forget your pin code, See troubleshooting; section 7.0

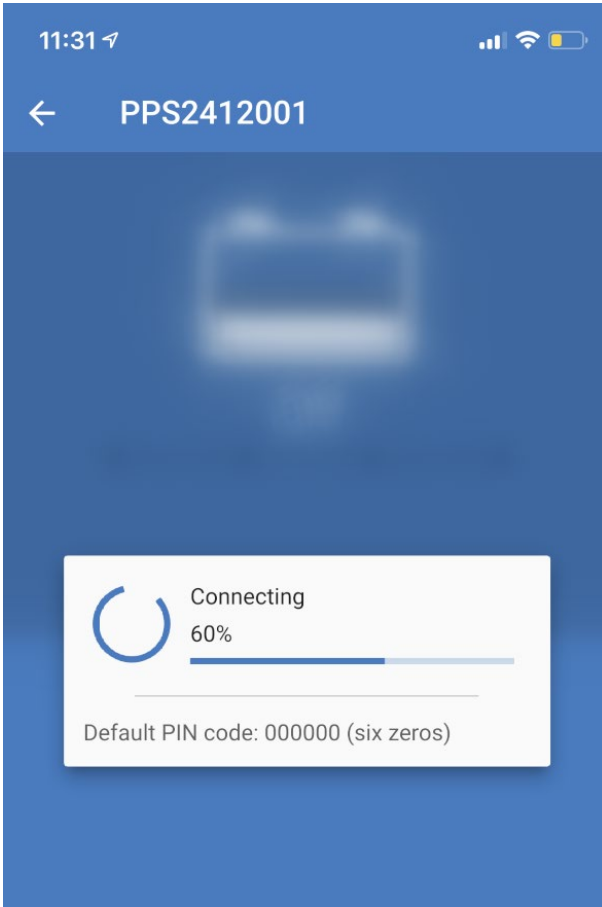

DOCUMENT NUMBER	REVISION NUMBER	DATE
AN007	1.1.0	09/05/2025

Step	Description	Notes
------	-------------	-------


118. Until you change your pin code from the default, or select the “do not warn me again” box, you will be prompted to change your pin each time you connect to the product. If you need to change your pincode or forget your pincode, see troubleshooting; section 7.0

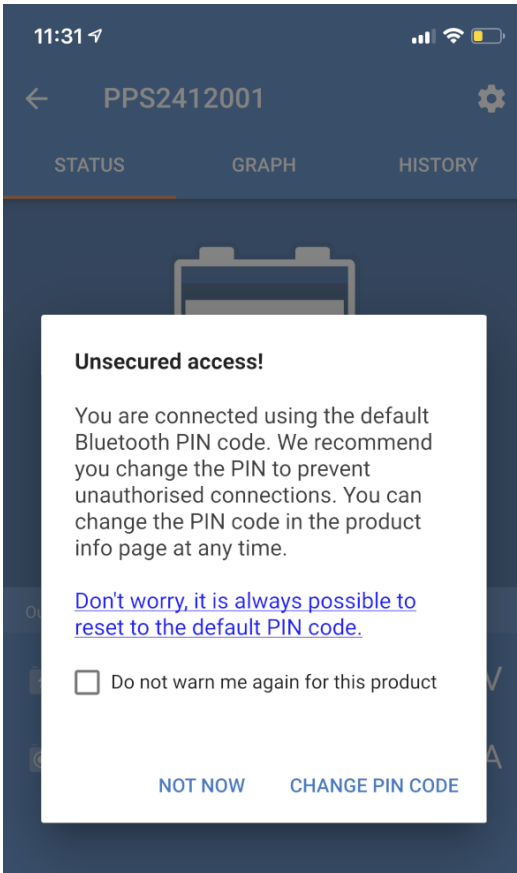

DOCUMENT NUMBER	REVISION NUMBER	DATE
AN007	1.1.0	09/05/2025

Step	Description	Notes
------	-------------	-------

- 119.** At this screen, please select which battery you are trying to charge. 2590 batteries can not be charged in system. Assure the system is set for 12A.

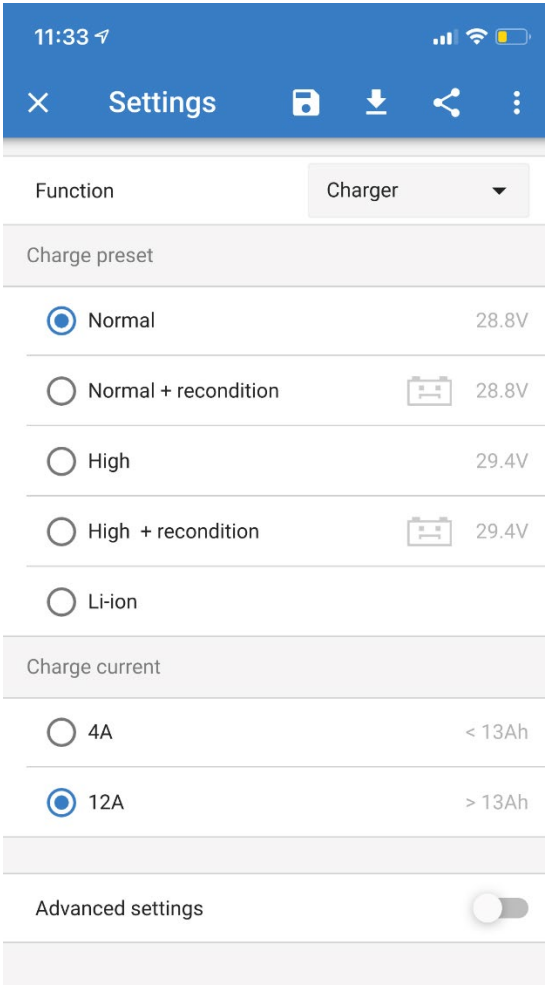

← M24

← 6T

- 120.** The charger is now configured. It will retain these settings until manually changed.

DOCUMENT NUMBER	REVISION NUMBER	DATE
AN007	1.1.0	09/05/2025

## 5.0 HOW TO OPERATE PPS

### 5.1 Start up procedure

Step	Description	Notes
------	-------------	-------

121. Open the latches of the pelican case



DOCUMENT NUMBER	REVISION NUMBER	DATE
AN007	1.1.0	09/05/2025

Step	Description	Notes
------	-------------	-------

122. Turn the Inverter switch to 'Monitor', The battery monitor should turn on. If it does not turn on.. See troubleshooting section 7.0



123. If your batteries have just been freshly charged, Hold the + and – keys on the monitor simulatenously for 3 seconds to set the SOC at 100%.



DOCUMENT NUMBER	REVISION NUMBER	DATE
AN007	1.1.0	09/05/2025

Step	Description	Notes
------	-------------	-------

124. Note the value of voltage displayed on the battery monitor.



125. Now, turn the PPS power mains switch 90° clockwise. The switch is on when green is visible.



DOCUMENT NUMBER	REVISION NUMBER	DATE
AN007	1.1.0	09/05/2025

Step	Description	Notes
------	-------------	-------

126. Watch the voltage on the Battery monitor screen, If the voltage dips by more than 1 Volt after turning the Power mains, Wait approximately 30 seconds for the voltage to rebound. Now, Turn the inverter switch to the 'ON' Position.



DOCUMENT NUMBER	REVISION NUMBER	DATE
AN007	1.1.0	09/05/2025

Step	Description	Notes
------	-------------	-------

127. A green light should be seen here, indicating the status of the inverter. If a red light is seen or no light is present; refer to section 7.0 for basic trouble shooting.



128. The system is now ready to delivery power. See the next section for instructions to power equipment from the PPS system.

## 5.2 How to Operate PPS with MSS OCC (MSS ICB)

- Required parts:
- [72914] Standard power cord (for MSS OCC)

Step	Description	Notes
------	-------------	-------

129. Open the latches of the pelican case



DOCUMENT NUMBER	REVISION NUMBER	DATE
AN007	1.1.0	09/05/2025

Step	Description	Notes
------	-------------	-------

130. At this time the PPS system should be powered up and a green light should be seen here. If a green light is not seen, Follow Start up procedure 4.0.



131. Assure that the MSS OCC power switch is in the off position before proceeding.





DOCUMENT NUMBER	REVISION NUMBER	DATE
AN007	1.1.0	09/05/2025

Step	Description	Notes
------	-------------	-------

- 132.** Plug in the standard power cord (for MSS OCC) [72914] to the power outlet of the PPS system. Install the plug in the position show, turn clockwise until it latches in place.



- 133.** Plug the other end of the standard power cord into the VideoRay MSS OCC.



DOCUMENT NUMBER	REVISION NUMBER	DATE
AN007	1.1.0	09/05/2025

Step	Description	Notes
------	-------------	-------

134. Now, turn on the switch of the VideoRay OCC unit.



135. Monitor the PPS system using the Victron Connect app, or by paging through the main menu of the battery monitor on the control panel. Keep a close eye on the SOC level and the 'time to go' for a successful mission.
136. Always turn off the devices plugged into the PPS system before turning off the Inverter switch & power mains.
137. Always close the seal cap of the PPS whenever it is not in use.



DOCUMENT NUMBER	REVISION NUMBER	DATE
AN007	1.1.0	09/05/2025

## 6.0 DISCHARGING

Required parts:

-[72892] Three outlet U.S. Extension

-an electric device that draws high power (electric heater preferred)

Step	Description	Notes
------	-------------	-------

138. Open the latches of the pelican case



Step	Description	Notes
------	-------------	-------

139.

Follow to steps of section 4.1 to start up the PPS system.

If the system is properly on, a green light should be seen here.



DOCUMENT NUMBER	REVISION NUMBER	DATE
AN007	1.1.0	09/05/2025

Step	Description	Notes
------	-------------	-------

- 140.** Plug in the three outlet U.S. extension [72892] to the power outlet of the PPS system. Install the plug in the position show, turn clockwise until it latches in place.





DOCUMENT NUMBER	REVISION NUMBER	DATE
AN007	1.1.0	09/05/2025

Step	Description	Notes
------	-------------	-------

- 141.** An LED is visible at the end of the three outlet U.S. extension [72892]. This light indicates that AC power is present.



- 142.** Plug in an electric heater or another AC powered device and allow the system to drain power. For most lithium batteries; a SOC below 30% is required for shipping purposes.

DOCUMENT NUMBER	REVISION NUMBER	DATE
AN007	1.1.0	09/05/2025

Step	Description	Notes
------	-------------	-------

- 143.** The most accurate reading of SOC is visible on the physical batteries themselves.  
Only 2590 and 6T batteries have a SOC indicator. M24 batteries typically do not.

To check the SOC for 2590 or 6T batteries, proceed with opening the battery storage panel


Assure the PPS System off by checking that the power mains and inverter switch are in the 'OFF' position




DOCUMENT NUMBER	REVISION NUMBER	DATE
AN007	1.1.0	09/05/2025

Step	Description	Notes
------	-------------	-------

- 144.** Remove the six (6) M6 male thumb screws [70256] securing the battery storage panel in place. Store these thumb screws safely to the side.

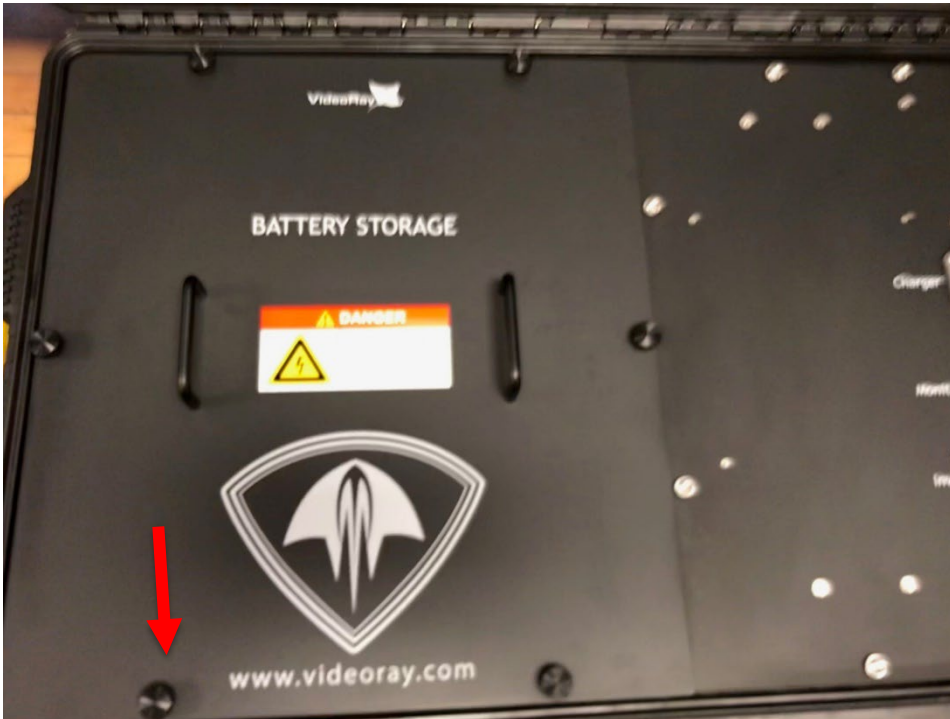

- 145.** Once the Battery storage panel has been removed and set to the side. Check the SOC indicators on the batteries in use. The SOC indicators pictured below show the batteries at full charge.

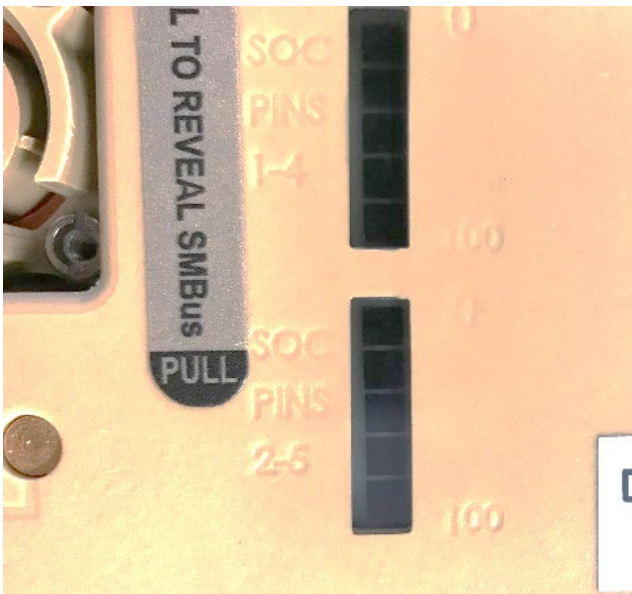

DOCUMENT NUMBER	REVISION NUMBER	DATE
AN007	1.1.0	09/05/2025

## 7.0 BASIC TROUBLESHOOTING

**For additional support;**

**Email:** Support@VideoRay.com

**Phone:** +1 610 458 3000, Option 1

**Fax:** +1 610 458 3010

### 7.1 FAQ

- I forgot my pin code, now what?
  - You can restore factory settings on the monitor by holding the 'setup' and 'select' buttons simultaneously for 3 seconds. Be sure to program your monitor again before use by following section 3.0.
- Can I purchase any two car batteries to use within the PPS?
  - Please refer to section 1.4 for battery recommendations and requirements. Many batteries will function in the box but only particular batteries will fit as they should. Keep a close eye on battery dimensions; particularly length and width.
- When idle, my system shows a load value other than 0 watts.
  - With the inverter remote in the "monitor" position, perform a "zero current calibration"; see section 3.1 step 79.
- Why is the SOC reading not perfectly accurate?
  - The battery monitor system gets more accurate as its used. It usually takes about 10 charge / discharge cycles till the system becomes well synced with the battery.
  - Changing battery types often will prevent the system from becoming well synced.
- Can I charge the 2590 batteries in system?
  - No, the 2590 battery harness has diodes for each battery to keep the batteries from self equalizing their charge. This prevents charging 2590 batteries in system.

DOCUMENT NUMBER	REVISION NUMBER	DATE
AN007	1.1.0	09/05/2025

- Can I swap 2590 batteries while the system is operating?
  - Yes, the system needs (10) 2590 batteries to operate, this allows for up to (2) batteries being swapped at any time.
- Do the batteries discharge in any defined order?
  - No, the batteries should discharge proportionally. Subtle differences in how fully charged the batteries are may cause some to deplete sooner than others. Keep an eye on the SOC indicators on the tops of the 2590 batteries.
- Why does the battery monitor need to be set up for different battery types?
  - This allows the battery monitor to collect data during use of your battery and compare to the battery's nominal values. This helps the system slowly become more accurate for SOC and time-to-go.
- Why do the 2590 batteries need a Low voltage cutoff?
  - These batteries have an internal PCB that monitors them and cuts out if they are overdrawn. If one battery were to shut down from overdraw, the others would cascade as well. The low voltage cutoff is a floor value that helps allow for smooth operation
- Can the SOC be manually entered?
  - Yes, the SOC can be manually entered but only from the Victron Connect interface. Within the Victron Connect App click the settings Cog in the top right, select 'battery', towards the bottom you will see 'state-of-charge' select it, input value, press 'ok'
- Why is it necessary to turn the system to 'monitor' before charging?
  - The battery monitor collects data during a discharge as well as during charging. The system can perform coulomb counting and various other data acquisition that allow the system to get to know your batteries.



DOCUMENT NUMBER	REVISION NUMBER	DATE
AN007	1.1.0	09/05/2025

## 7.2 No Power output from PPS

### 7.2.1 is the battery monitor functional?

With a battery pack installed, flip the inverter switch to “monitor”.

If yes,


proceed to 7.2.2.

If no,

- Assure your battery pack is installed properly.

-Check the battery monitor breaker. Reset, only if the breaker has tripped.

The breaker is located beneath the battery storage panel, under the center rail. See below.

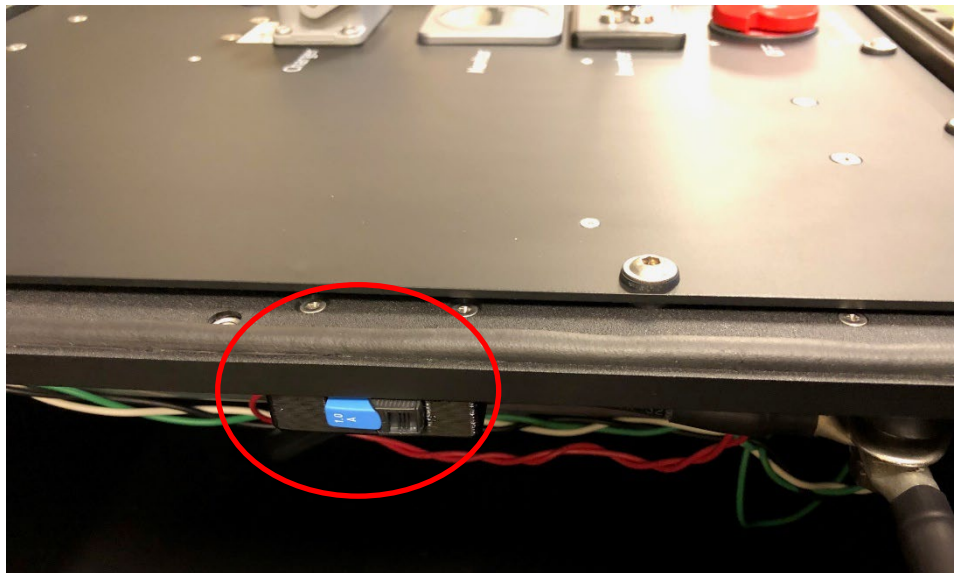

Not tripped

Tripped



DOCUMENT NUMBER	REVISION NUMBER	DATE
AN007	1.1.0	09/05/2025

To reset, push the blue button in until it clicks.

If the battery monitor is still not functional, contact VideoRay Support.

### 7.2.2 What is the voltage of the system?

If the voltage is below 24V and you're using 2590 batteries, it is time to charge your batteries. ***See the xxxxx section for important instructions and warnings when charging 2590 batteries.***

If the voltage is below 24V and you're using an M24 or 6T battery pack, see section 3.0 and ensure your battery monitor settings are correct. Ensure the low voltage relay is set to OFF.

If the voltage is above 24V, proceed to 7.2.3.

If no display is shown on the battery monitor, revisit section 7.2.1

### 7.2.3 Is the inverter functional?

Follow section 4.0 to properly turn on the system.

Check for the green light on the inverter switch.



If a green light can be seen but your equipment is not working, check the AC output of the PPS system. Follow section 6.0 for connecting the three outlet U.S. extension (VideoRay Part Number 72892). Check for the light indicating presence of AC power.

DOCUMENT NUMBER	REVISION NUMBER	DATE
AN007	1.1.0	09/05/2025



If the light can be seen on the three outlet U.S. extension but your system still is not working, it is possible there is a problem with your system. Using an alternate power source, test the system. If the system functions, this equipment may not be compatible with a PPS system.

If the green LED is visible by the inverter switch but the light cannot be seen on the three outlet U.S. extension, there is an issue with the AC output of the system. Ensure your battery monitor settings are correct by following section 3.0. If you are still having trouble contact VideoRay support.

#### 7.2.4 Continuous faults occur during operation



System low on charge.

Thrusters are set too high.

One of your batteries may be damaged. Test them independently.